General Information

Chassis and Paint Codes	Warning/Caution Label Locations	
'91 Model	'91 Model	1-5
U.S. Model	'92 Model	
Canada Model1-3	'93 Model	
'92 Model	'94 Model	1-5
U.S. Model	'95 Model	
Canada Model	'96 Model	1-5
'93 Model	Lifts and Support Points	
U.S. Model	'91-'95 Models	
Canada Model	Lift	
'94 Model	Floor Jack	1-1
U.S. Model	Safety Stands	1-1
Canada Model	'96 Model	
	Lift and Safety Stands	1-9
'95 Model	Floor Jack	
U.S. Model	Towing	
Canada Model1–3	'91-'95 Models	1–1
'96 Model	'96 Model	
U.S. Model	Service Precautions	
Canada Model1-3	Handling of Special Nuts and Bolts	1–1
Identification Number Locations	Handling of Tires	
'91-'95 Models1-4	Engine Steam Cleaning	
'96 Model1-4	(NSX-T only)	1–1
	\ J	