

# Fuel and Emissions ('95-'96 Models)

Special Tools .....	11-2	DTC Chart .....	11-52	Starter Switch Signal .....	11-127	Throttle Cable .....	11-150
Component Location Index .....	11-3	How to Read Flowcharts ...	11-58	Idle Speed Setting .....	11-128	Throttle Body .....	11-151
System Description		<b>PGM-FI System</b>		<b>Fuel Supply System</b>		<b>Fuel Injection Air (FIA) Control System</b> .....	11-153
Vacuum Connections .....	11-7	System Description .....	11-59	Fuel Lines .....	11-130	Intake Air Bypass (IAB) Control System .....	11-154
Electrical Connections .....	11-10	Troubleshooting Flowcharts		System Description .....	11-132	Intake Air Bypass (IAB) Control Valve Testing .....	11-157
System Connectors		MIL Never Comes On .....	11-61	Fuel Pressure .....	11-132	<b>Emission Control System</b>	
Engine Compartment, Right Side .....	11-24	MIL Stays On .....	11-62	Fuel Injectors .....	11-134	System Description .....	11-158
Engine Compartment, Left Side .....	11-26	<b>Drive By Wire System</b>		Fuel Injector Resistor .....	11-136	System Description .....	11-158
Behind the Bulkhead Panels .....	11-28	System Description .....	11-107	Fuel Pressure Regulator .....	11-137	Tailpipe Emission .....	11-158
Front Compartment and Under Dash .....	11-34	<b>Idle Control System</b>		Fuel Filter .....	11-138	Three Way Catalytic Converter (TWC) Description .....	11-159
Troubleshooting		Troubleshooting Flowcharts		Troubleshooting Flowcharts		EGR System .....	11-161
Troubleshooting Procedures .....	11-38	Air Conditioning Signal ....	11-117	Fuel Pump Relay .....	11-139	Positive Crankcase (PCV) System .....	11-166
Symptom Chart .....	11-42	Alternator FR Signal .....	11-119	Fuel Pump Resistor .....	11-141	Evaporative Emission (EVAP) Controls Description .....	11-167
Probable Cause List .....	11-43	A/T Gear Position Signal .....	11-121	PGM-FI Main Relay .....	11-144	EVAP Two Way Valve Testing .....	11-173
ECM Control Module Terminal Arrangement .....	11-46	Neutral Switch Signal (M/T) .....	11-123	Fuel Pump .....	11-142		
		Clutch Switch Signal (M/T) .....	11-124	PGM-FI Main Relay .....	11-143		
		Brake Switch Signal .....	11-126	Fuel Tank .....	11-147		
				<b>Intake Air System</b>			
				System Description .....	11-148		
				Air Cleaner .....	11-149		