

# Fuel and Emissions ('93-'94 Models)

Special Tools .....	11-2	MIL Never Comes On .....	11-43	Fuel Injectors .....	11-110	Throttle Valve Dashpot System	
Component Location Index .....	11-3	MIL Stays On .....	11-44	Fuel Injector Resistor .....	11-112	Testing .....	11-135
System Description				Fuel Pressure Regulator .....	11-113	Intake Air Bypass (IAB) Control	
Vacuum Connections .....	11-6	Idle Control System		Fuel Filter .....	11-114	System .....	11-136
Electrical Connections .....	11-10	DTC Chart .....	11-84	Fuel Pump Description .....	11-115	Intake Air Bypass (IAB) Control	
System Connectors		System Description .....	11-85	Fuel Pump .....	11-119	Valve Testing .....	11-139
Engine Compartment,		Troubleshooting Flowcharts		PGM-FI Main Relay .....	11-122	Intake Air Bypass (IAB) Control	
Right Side .....	11-22	Air Conditioning Signal ....	11-90	Troubleshooting Flowcharts		Valve Disassembly .....	11-140
Engine Compartment,		Alternator FR Signal .....	11-92	Fuel Pump Resistor .....	11-124	Emission Control System	
Left Side .....	11-20	A/T Gear Position		PGM-FI Main Relay .....	11-120	DTC Chart .....	11-141
Behind the Seat Back		Signal .....	11-94	Fuel Tank .....	11-126	System Description .....	11-142
Panels .....	11-24	Neutral Switch Signal		Intake Air System		Tailpipe Emission .....	11-142
Front Compartment and		(M/T) .....	11-96	DTC Chart .....	11-127	Three Way Catalytic Converter (TWC)	
Under Dash .....	11-28	Clutch Switch Signal		System Description .....	11-128	Description .....	11-143
Troubleshooting		(M/T) .....	11-98	Air Cleaner .....	11-129	Inspection .....	11-144
DTC Chart .....	11-32	Starter Switch Signal .....	11-100	Throttle Cable .....	11-130	Positive Crankcase (PCV)	
Self-diagnostic Procedures	11-34	Fast Idle Thermo Valve .....	11-101	Throttle Body		System .....	11-151
How to Read Flowcharts ...	11-39	Idle Speed Setting .....	11-102	Description .....	11-131	Evaporative Emission (EVAP) Controls	
PGM-FI System		Fuel Supply System		Inspection .....	11-131	STET .....	11-152
System Description .....	11-40	DTC Chart .....	11-104	Disassembly .....	11-133	Troubleshooting	
Troubleshooting Flowcharts		System Description .....	11-105	Throttle Valve Dashpot System		Flowchart .....	11-154
Engine Will Not Start .....	11-42	Fuel Pressure .....	11-105	Description .....	11-134	EVAP Two Way Valve	
						Testing .....	11-157