

Fuel and Emissions ('91-'92 Models)

Special Tools	11-2	Alternator FR Signal	11-74	PGM-FI Main Relay	11-103	Intake Air Bypass (IAB) Control	
Component Location Index	11-3	A/T Gear Position		Troubleshooting Flowcharts		Valve Testing	11-122
System Description		Signal	11-76	Fuel Pump Resistor	11-106	Intake Air Bypass (IAB) Control	
Vacuum Connections	11-5	Neutral Switch Signal		PGM-FI Main Relay	11-104	Valve Disassembly	11-123
Electrical Connections	11-8	(M/T)	11-78	Fuel Tank	11-108	Emission Control System	
Troubleshooting		Clutch Switch Signal		Intake Air System		DTC Chart	11-124
DTC Chart	11-16	(M/T)	11-80	DTC Chart	11-110	System Description	11-125
Self-diagnostic Procedures	11-18	Starter Switch Signal	11-82	System Description	11-111	Tailpipe Emission	11-125
How to Read Flowcharts	11-23	Fast Idle Thermo Valve	11-83	Air Cleaner	11-112	Three Way Catalytic Converter (TWC)	
PGM-FI System		Idle Speed Setting	11-84	Throttle Cable	11-113	Description	11-126
System Description	11-24	Fuel Supply System		Throttle Body		Inspection	11-127
Troubleshooting Flowcharts		DTC Chart	11-86	Description	11-114	Positive Crankcase (PCV)	
MIL Never Comes On	11-26	System Description	11-87	Inspection	11-114	System	11-134
MIL Stays On	11-27	Fuel Pressure	11-87	Disassembly	11-116	Evaporative Emission (EVAP) Controls	
Idle Control System		Fuel Injectors	11-92	Throttle Valve Dashpot System		Description	11-135
DTC Chart	11-66	Fuel Injector Resistor	11-94	Description	11-117	Troubleshooting	
System Description	11-67	Fuel Pressure Regulator	11-95	Throttle Valve Dashpot System		Flowchart	11-137
Troubleshooting Flowcharts		Fuel Filter	11-97	Testing	11-118	EVAP Two Way Valve	
Air Conditioning Signal	11-72	Fuel Pump Description	11-98	Intake Air Bypass (IAB) Control		Testing	11-140
		Fuel Pump	11-102	System	11-119		