

Automatic Transmission ('91-'94 Models)

Special Tools	14-2	Hydraulic System		Secondary Valve Body		Clutch	
Description		Symptom-to-Component		Disassembly/Inspection		Component Location	
General Operation	14-3	Chart	14-84	Reassembly	14-116	Index	14-132
Clutches	14-6	Road Test	14-88	Servo Body/Throttle Valve Body		Disassembly	14-135
Power Flow	14-9	Stall Speed Test	14-90	Disassembly/Inspection		Reassembly	14-137
Electronic Control		Fluid Level		Reassembly	14-118	1st-hold Clutch Bearing	
System	14-15	Checking/Changing	14-91	Regulator Valve Body		Replacement	14-141
Hydraulic Control	14-18	Pressure Testing	14-92	Disassembly/Inspection		Torque Converter Housing Bearings	
Hydraulic Flow	14-28	Transmission		Reassembly	14-120	Mainshaft Bearing/Oil Seal	
Lock-up System	14-39	Transmission		Lock-up Valve Body		Replacement	14-142
ATF Cooler	14-45	Removal	14-96	Disassembly/Inspection		Countershaft Bearing	
Electrical System		Reassembly	14-147	Reassembly	14-121	Replacement	14-143
Component Locations	14-47	Installation	14-153	2nd Accumulator Body		Secondary Shaft Bearing	
Troubleshooting Procedures	14-50	Component Location Index		Disassembly/Inspection		Replacement	14-143
Symptom-to-Component		Left Side Cover/		Reassembly	14-122	Transmission Housing Bearings	
Chart	14-52	Transmission	14-100	Mainshaft		Replacement	14-144
Lock-up Control Solenoid Valve A/B		Transmission Housing ...	14-102	Disassembly/Inspection		Reverse Idler Gear	
Test	14-79	Torque Converter Housing/		Reassembly	14-123	Installation	14-145
Replacement	14-79	Valve Body	14-104	Countershaft		Manual Valve Detent Spring	
Shift Control Solenoid Valve A/B		Left Side Cover Removal	14-106	Disassembly/Inspection		Replacement/Adjustment	14-146
Test	14-80	Transmission Housing		Reassembly	14-124	Parking Brake Stopper	
Replacement	14-80	Removal	14-107	Inspection/Installation ...	14-125	Inspection/	
Linear Solenoid		Valve Body		One-way Clutch/Parking Gear		Adjustment	14-146
Test	14-81	Removal	14-108	Disassembly/Inspection		Torque Converter/	
Replacement	14-81	Valve Body Repair	14-109	Reassembly	14-128	Drive Plate	14-152
Mainshaft/Countershaft Speed Sensors		Valve Assembly	14-110	Secondary Shaft		Shift Cable	
Replacement	14-83	Valve Caps Description	14-112	Disassembly/Inspection		Adjustment	14-157
		ATF Pump Inspection	14-113	Reassembly	14-129	Removal/Installation	14-158
		Main Valve Body		Inspection/Installation ...	14-130	Shift Lever	14-159
		Disassembly/Inspection				Shift Indicator Panel	
		Reassembly	14-114			Adjustment	14-160