

Differential

Manual Transmission

Special Tools	15-2
Component Location Index	15-3
Preset Torque Inspection	15-4
Bearing Replacement	15-5
Differential	
Disassembly	15-6
Reassembly	15-7
Oil Seal Removal	15-11
Bearing Outer Race Replacement (Clutch Housing Side)	15-12
Bearing Preload Adjustment	15-12
Oil Seal Installation	15-14

Automatic Transmission

Special Tools	15-16
Component Location Index	15-17
Preset Torque Inspection	15-18
Bearing Replacement	15-19
Differential	
Disassembly	15-20
Reassembly	15-23
Clutch Disc, Clutch Plate Replacement	15-22
Oil Seal Removal	15-25
Bearing Outer Race Replacement (Torque Converter Housing Side)	15-26
Bearing Preload Adjustment	15-26
Oil Seal Installation	15-28