

# Steering

## ('91-'94 Models)

\*: Read [SRS precautions](#) before working in this area

Special Tools .....	17-2	Indication .....	17-43	Steering Wheel		Ball Joint Boot	
Manual Steering Component		Troubleshooting Test		*Removal .....	17-8	Replacement .....	17-30
Location Index .....	17-18	Hardness Installation .....	17-45	*Disassembly/ Reassembly .....	17-9	Power Steering Component Location	
System Description		Symptom-to-System Chart .....	17-51	*Installation .....	17-10	Index .....	17-63
Steering Column .....	17-3	Troubleshooting Flowcharts		Steering Column		Power Steering Gearbox	
Energy-absorbing Steering		Hard Steering .....	17-46	*Removal .....	17-12	Removal/ Installation .....	17-64
Column/Wheel .....	17-5	Inspection		Inspection .....	17-14	Component Location Index ..	17-68
Electrical Power Steering		Steering Wheel Rotational		*Installation .....	17-15	Inspection .....	17-69
(EPS) .....	17-31	Play .....	17-6	Manual Steering Gearbox		Ball Joint Boot	
Major Components .....	17-32	Steering Effort Check		Removal/Installation .....	17-19	Replacement .....	17-72
System Operation .....	17-33	(Manual Steering Only) .....	17-6	Component Location		EPS Power Unit	
Function and Operation .....	17-34	Power Assist Check		Index .....	17-21	Replacement .....	17-73
Power Steering Component		with Car Parked .....	17-6	Inspection .....	17-22	EPS Control Unit	
Locations .....	17-41	Steering Gearbox				Replacement .....	17-74
Troubleshooting Precautions ..	17-42	Adjustment .....	17-7				
Diagnostic Trouble Code (DTC)							

## ('95-'96 Models)

\*: Read [SRS precautions](#) before working in this area

Special Tools .....	17-2	Component Locations .....	17-16	Power Assist Check		Steering Gearbox	
Component Location Index .....	17-3	EPS Control Unit		with Car Parked .....	17-44	Removal/Installation .....	17-55
System Description		Terminal Arrangement .....	17-20	Steering Gearbox		Component Location	
Steering Column .....	17-4	Troubleshooting Precautions ..	17-22	Adjustment .....	17-44	Index .....	17-59
Energy-absorbing Steering		Diagnostic Trouble Code (DTC)		Steering Wheel		Inspection .....	17-60
Column/Wheel .....	17-6	Indication .....	17-23	*Removal .....	17-45	Ball Joint Boot	
Electrical Power Steering		Symptom-to-System Chart .....	17-25	*Disassembly/ Reassembly .....	17-46	Replacement .....	17-63
(EPS) .....	17-7	Troubleshooting Flowcharts		*Installation .....	17-47	EPS Control Unit	
Major Components .....	17-8	Hard Steering .....	17-26	Steering Column		Replacement .....	17-64
System Operation .....	17-9	Inspection		*Removal .....	17-49		
Function and Operation .....	17-10	Steering Wheel Rotational		Inspection .....	17-51		
		Play .....	17-44	*Installation .....	17-52		