

Suspension

Special Tools	18-2
Component Location Index	18-3
System Description	
Suspension Composition	18-4
Wheel Alignment	
Height	18-6
Front Wheel Alignment Adjusting Procedure	
'91-'92 Models	18-7
'93-'96 Models	18-7
Front Turning Angle Inspection	18-10
Rear Wheel Alignment Adjusting Procedure	
'91-'92 Models	18-11
'93-'96 Models	18-11
Runout	18-13
Bearing End Play	18-13

Front Suspension	
Torque Specifications	18-14
Hub Replacement	
'91-'94 Models	18-15
'95-'96 Models	18-15
Knuckle/Control Arms/Compliance Pivot	
Component Location Index	
'91-'92 Models	18-20
'93-'96 Models	18-20
Removal	
'91-'92 Models	18-21
'93-'96 Models	18-21
Ball Joint Boot Replacement	18-26
Front Damper	
Removal	18-27
Disassembly/Inspection	18-27
Inspection	18-28
Reassembly	18-29
Installation	18-29

Rear Suspension	
Torque Specifications	18-30
Hub Replacement	
'91-'94 Models	18-31
'95-'96 Models	18-31
Knuckle/Control Arms	
Component Location Index	18-35
Removal	
'91-'92 Models	18-36
'93-'96 Models	18-36
Ball Joint Boot Replacement	18-39
Rear Damper	
Removal	18-40
Disassembly/Inspection	18-42
Inspection	18-43
Reassembly	18-44
Installation	18-44
Disposal	18-44