

# Body Electrical

\*: Read [SRS precautions](#) before working in this area

|   |        |  |        |   |        |  |        |
|---|--------|--|--------|---|--------|--|--------|
| <b>Special Tools</b>                    |        | <b>Speedometer/Trip Meter/Odometer</b> |        | <b>Brake Light Failure Sensor</b>           |        | <b>Replacement</b>                           |        |
| '91-'94 Models                          | 23-2   | Troubleshooting                        |        | Test  | 23-153 | '91-'92 Models                               | 23-174 |
| '95-'96 Models                          | 23-2   | '91-'92 Models                         | 23-127 | <b>Roof Lock Switch Test</b>                |        | '93-'94 Models                               | 23-178 |
| <b>Troubleshooting</b>                  |        | '93-'94 Models                         | 23-130 | '95-'96 Models                              | 23-154 | '95-'96 Models                               | 23-182 |
| Tips and Precautions                    | 23-3   | '95-'96 Models                         | 23-130 | <b>Roof Holder Switch Test</b>              |        | <b>VSS Speed Sensor</b>                      |        |
| Five-step                               |        | <b>VSS Replacement</b>                 |        | '95-'96 Models                              | 23-155 | Input Test                                   |        |
| Troubleshooting                         | 23-5   | '91-'92 Models                         | 23-129 | <b>A/T Gear Position Indicator</b>          |        | '91-'92 Models                               | 23-129 |
| <b>Relay and Control Unit Locations</b> |        | '93-'96 Models                         | 23-133 | <b>Component Location Index</b>             |        | <b>Head Light/Turn Signal</b>                |        |
| Front Compartment                       | 23-7   | <b>Fuel Gauge</b>                      |        | '91-'92 Models                              | 23-148 | Light Bulb Replacement                       |        |
| Dashboard                               |        | Gauge Test                             | 23-134 | '93-'94 Models                              | 23-152 | '91-'92 Models                               | 23-175 |
| '91-'94 Models                          | 23-8   | Sending Unit Test                      | 23-135 | '95-'96 Models                              | 23-156 | '93-'94 Models                               | 23-179 |
| '95-'96 Models                          | 23-8   | <b>Coolant Temperature Gauge</b>       |        | <b>Indicator Input Test</b>                 |        | <b>Hazard Warning Switch</b>                 |        |
| Dashboard, Door and                     |        | Gauge Test                             | 23-136 | '91-'92 Models                              | 23-150 | Light Bulb Replacement                       |        |
| Floor                                   |        | Sending Unit Test                      | 23-136 | '93-'94 Models                              | 23-154 | '91-'94 Models                               | 23-215 |
| '91-'94 Models                          | 23-9   | <b>Engine Oil Pressure Gauge</b>       |        | '95-'96 Models                              | 23-158 | <b>Retractor Switch</b>                      |        |
| '95-'96 Models                          | 23-9   | Test                                   | 23-137 | <b>A/T Gear Position Switch</b>             |        | Removal                                      | 23-184 |
| <b>Rear Bulkhead</b>                    |        | <b>Engine Oil Pressure Warning</b>     |        | Test  | 23-160 | Test   | 23-185 |
| '91-'92 Models                          | 23-11  | System                                 |        | Replacement                                 | 23-161 | Bulb Replacement                             | 23-185 |
| '93-'94 Models                          | 23-10  | Switch Test                            | 23-137 | <b>Bulb Replacement</b>                     |        | <b>Retractor Motor</b>                       |        |
| '95-'96 Models                          | 23-10  | <b>Brake Warning System</b>            |        | Integrated Control Unit                     |        | Replacement                                  | 23-186 |
| <b>Engine Compartment</b>               |        | Parking Brake Switch                   |        | Input Test                                  |        | <b>Headlight Housing</b>                     |        |
| '91-'94 Models                          | 23-12  | Test                                   | 23-138 | '91-'92 Models                              | 23-156 | Adjustment                                   | 23-187 |
| '95-'96 Models                          | 23-12  | Fluid Level Switch Test                | 23-138 | '93-'96 Models                              | 23-164 | <b>Retractor Motor Test</b>                  |        |
| <b>Battery</b>                          |        | <b>Seat Belt Reminder System</b>       |        | <b>Lights-on Reminder System</b>            |        | Headlight Relay Test                         | 23-189 |
| Component Location Index                | 23-67  | Seat Belt Switch Test                  | 23-139 | Chime Test                                  | 23-170 | Dimmer Relay Test                            | 23-189 |
| Replacement                             | 23-67  | <b>Low Fuel Indicator</b>              |        | <b>Key-in Reminder System</b>               |        | <b>Retractor Relay Test</b>                  |        |
| Test                                    | 23-68  | Indicator Light Test                   | 23-139 | Ignition Key Switch Test                    | 23-171 | Retractor Cut/Taillight                      |        |
| <b>Under-dash Fuse/Relay Box</b>        |        | <b>Interlock System</b>                |        | <b>Lighting System</b>                      |        | Relay Test                                   | 23-190 |
| Removal/Installation                    |        | *Component Location                    |        | Component Location Index                    |        | <b>Headlights</b>                            |        |
| '91-'92 Models                          | 23-68  | Index                                  | 23-140 | '91-'94 Models                              | 23-168 | Description                                  | 23-191 |
| '93-'94 Models                          | 23-70  | <b>Control Unit Input</b>              |        | '95-'96 Models                              | 23-172 | Adjustment                                   | 23-192 |
| '95-'96 Models                          | 23-70  | Test                                   | 23-142 | <b>Switches</b>                             |        | Replacement                                  | 23-193 |
| <b>Ignition Switch</b>                  |        | Key Interlock Solenoid Test            | 23-143 | Retractable Headlight Control Unit          |        | Bulb Replacement                             | 23-194 |
| Test                                    | 23-72  | Shift Lock Solenoid                    |        | Input Test                                  |        | <b>Daytime Running Lights (Canada)</b>       |        |
| Electrical Switch                       |        | Test/Replacement                       | 23-144 | '91-'94 Models                              | 23-174 | Replacement                                  | 23-194 |
| Replacement                             | 23-72  | <b>Safety Indicator</b>                |        | '95-'96 Models                              | 23-178 | <b>Front Turn Signal/Front Parking Light</b> |        |
| <b>Steering Lock Removal/</b>           |        | *Component Location                    |        | <b>Daytime Running Lights Control Unit</b>  |        | Replacement                                  | 23-195 |
| <b>Installation</b>                     |        | Index                                  | 23-145 | Input Test (Canada)                         |        | <b>Front Side Marker Lights</b>              |        |
| '91-'92 Models                          | 23-71  | Description                            | 23-145 | '91-'92 Models                              | 23-172 | Replacement                                  | 23-195 |
| '93-'94 Models                          | 23-73  | <b>Indicator Input Test</b>            |        | '93-'94 Models                              | 23-176 | <b>Taillights</b>                            |        |
| '95-'96 Models                          | 23-73  | '91-'92 Models                         | 23-144 | '95-'96 Models                              | 23-180 | Replacement                                  | 23-196 |
| <b>Gauge Assembly</b>                   |        | '93-'96 Models                         | 23-150 | <b>Combination Light/Turn Signal Switch</b> |        | Bulb Replacement                             | 23-197 |
| Gauge/Terminal Location                 |        | <b>Troubleshooting</b>                 |        | Test  |        | <b>Rear Side Marker Lights</b>               |        |
| Index                                   | 23-121 | '91-'92 Models                         | 23-146 | '91-'92 Models                              | 23-173 | Replacement                                  | 23-197 |
| *Removal                                | 23-126 | '93-'94 Models                         | 23-150 | '93-'94 Models                              | 23-177 | <b>License Plate Lights</b>                  |        |
| <b>Bulb Locations</b>                   |        | '95-'96 Models                         | 23-152 | '95-'96 Models                              | 23-181 | Replacement                                  | 23-197 |
| '91-'94 Models                          | 23-128 |  |        | <b>Headlight/Turn Signal Switch</b>         |        | <b>Glove Box Light</b>                       |        |
| '95-'96 Models                          | 23-128 |  |        |   |        | Replacement/Test                             |        |
| <b>Disassembly</b>                      |        |  |        |   |        | '91-'92 Models                               | 23-190 |
|   | 23-129 |  |        |   |        | '93-'96 Models                               | 23-198 |

## Body Electrical (Cont'd)

|  |        |
|--|--------|
| Ceiling/Courtesy/Trunk Lights                    |        |
| Component Location                               |        |
| Index  | 23-199 |
| Ceiling Lights Test                              | 23-201 |
| Ceiling Light Replacement                        | 23-203 |
| Courtesy Light Test/<br>Replacement              | 23-204 |
| Door Switch Test                                 | 23-204 |
| Trunk Light Test/<br>Replacement                 | 23-205 |
| Latch Switch Test/<br>Replacement                | 23-205 |
| Back-up Lights                                   |        |
| Component Location                               |        |
| Index  | 23-206 |
| Test   | 23-208 |
| Brake Lights                                     |        |
| Component Location                               |        |
| Index  | 23-209 |
| Brake Switch Test                                | 23-211 |
| High Mount Brake Light                           |        |
| Test   | 23-211 |
| Replacement                                      | 23-212 |
| Rear Spoiler Replacement                         | 23-212 |
| Side Marker/Turn Signal/Hazard<br>Flasher System |        |
| Component Location                               |        |
| Index  | 23-213 |
| Description                                      | 23-216 |
| Turn Signal/Hazard Relay                         |        |
| Input Test                                       |        |
| '91-'92 Models                                   | 23-208 |
| '93-'94 Models                                   | 23-212 |
| '95-'96 Models                                   | 23-218 |
| Cancel Unit Input Test                           |        |
| '91-'92 Models                                   | 23-209 |
| '93-'94 Models                                   | 23-213 |
| '95-'96 Models                                   | 23-219 |
| Hazard Warning Switch                            |        |
| Replacement                                      |        |
| '91-'94 Models                                   | 23-214 |
| '95-'96 Models                                   | 23-220 |
| Test   | 23-221 |
| Dash Lights Brightness Controller                |        |
| Component Location                               |        |
| Index  |        |
| '91-'94 Models                                   | 23-216 |
| '95-'96 Models                                   | 23-222 |
| Control Unit Input Test                          | 23-224 |
| Controller                                       |        |
| Removal  | 23-225 |

|                          |        |
|--------------------------|--------|
| Test                     | 23-226 |
| Bulb Replacement         | 23-226 |
| Entry Light Timer System |        |
| Component Location       |        |
| Index                    | 23-227 |
| Foot Well Light          |        |
| Replacement              | 23-229 |
| Ignition Key Light       |        |
| Replacement              | 23-229 |
| Clock                    |        |
| Removal                  | 23-231 |
| Terminals                | 23-231 |
| Cigarette Lighter        |        |
| Replacement              | 23-233 |
| Relay Test               | 23-234 |
| Stereo Sound System      |        |
| Component Location       |        |
| Index                    | 23-235 |
| Unit Removal             | 23-238 |
| Unit Terminals           | 23-240 |
| Power Amplifier Relay    |        |
| Test                     | 23-240 |
| Power Antenna Motor      |        |
| Test                     | 23-241 |
| Replacement              | 23-242 |
| Antenna Mast             |        |
| Replacement              | 23-242 |
| Antenna Tube             |        |
| Replacement              | 23-244 |
| Front Speaker            |        |
| Replacement              | 23-245 |
| Rear Speaker             |        |
| Replacement              |        |
| '91-'92 Models           | 23-234 |
| '93-'96 Models           | 23-245 |
| Foot Well Bass Speaker   |        |
| Replacement              | 23-245 |
| Horns                    |        |
| *Component Location      |        |
| Index                    | 23-246 |
| Description              | 23-246 |
| Horn Test                | 23-248 |
| Relay Test               | 23-249 |
| *Switch Test             | 23-249 |
| Trunk Opener             |        |
| Component Location       |        |
| Index                    | 23-252 |
| Main Switch Test         | 23-253 |
| Opener Switch Test       | 23-254 |

|                               |        |
|-------------------------------|--------|
| Solenoid Test/<br>Replacement | 23-254 |
| Power Mirrors                 |        |
| Component Location            |        |
| Index                         | 23-255 |
| Function Test                 | 23-257 |
| Switch                        |        |
| Removal                       | 23-258 |
| Test                          | 23-258 |
| Door Mirror                   |        |
| Test                          | 23-259 |
| Replacement                   | 23-259 |
| Door Mirror Actuator          |        |
| Replacement                   | 23-260 |
| Power Door Locks              |        |
| Component Location            |        |
| Index                         |        |
| '91-'94 Models                | 23-253 |
| '95-'96 Models                | 23-261 |
| Troubleshooting               |        |
| '91-'92 Models                | 23-251 |
| '93-'94 Models                | 23-255 |
| '95-'96 Models                | 23-263 |
| Control Unit Input Test       |        |
| '91-'92 Models                | 23-252 |
| '93-'94 Models                | 23-256 |
| '95-'96 Models                | 23-264 |
| Driver's Door Actuator        |        |
| Test                          | 23-266 |
| Passenger's Door Actuator     |        |
| Test                          | 23-267 |
| Door Lock Switch Test         | 23-268 |
| Power Windows                 |        |
| Component Location            |        |
| Index                         | 23-269 |
| Description                   | 23-269 |
| Troubleshooting               |        |
| '91-'92 Models                | 23-259 |
| '93-'94 Models                | 23-263 |
| '95-'96 Models                | 23-271 |
| Control Unit Input Test       | 23-272 |
| Master Switch                 |        |
| Test                          | 23-273 |
| Replacement                   | 23-274 |
| Passenger's Switch            |        |
| Test                          | 23-274 |
| Replacement                   | 23-275 |
| Switch Light Bulb             |        |
| Replacement                   | 23-275 |
| Driver's Motor Test           | 23-276 |

|                               |        |
|-------------------------------|--------|
| Passenger's Motor Test        | 23-276 |
| Relay Test                    | 23-277 |
| Power Seats                   |        |
| Component Location            |        |
| Index                         | 23-278 |
| Seat Switch Test              | 23-280 |
| Motor Test                    | 23-281 |
| Rear Window Defogger          |        |
| Component Location            |        |
| Index                         |        |
| '91-'92 Models                | 23-270 |
| '93-'94 Models                | 23-274 |
| '95-'96 Models                | 23-282 |
| Description                   |        |
| '91-'92 Models                | 23-270 |
| '93-'94 Models                | 23-274 |
| '95-'96 Models                | 23-282 |
| Troubleshooting               |        |
| '91-'92 Models                | 23-272 |
| '93-'94 Models                | 23-276 |
| '95-'96 Models                | 23-284 |
| Rear Window Defogger Switch   |        |
| Light Bulb Replacement        |        |
| '91-'94 Models                | 23-278 |
| Switch Replacement            |        |
| '91-'92 Models                | 23-273 |
| '93-'94 Models                | 23-277 |
| '95-'96 Models                | 23-285 |
| Relay Test                    |        |
| '91-'94 Models                | 23-278 |
| '95-'96 Models                | 23-286 |
| Switch Test                   |        |
| '91-'94 Models                | 23-279 |
| '95-'96 Models                | 23-287 |
| Function Test                 | 23-288 |
| Defogger Wire Repair          | 23-288 |
| Wiper/Washers                 |        |
| Component Location            |        |
| Index                         | 23-289 |
| Description                   | 23-289 |
| Troubleshooting               |        |
| '91-'92 Models                | 23-279 |
| '93-'94 Models                | 23-283 |
| '95-'96 Models                | 23-291 |
| Intermittent Wiper Relay Test |        |
| '91-'92 Models                | 23-279 |
| '93-'94 Models                | 23-283 |
| '95-'96 Models                | 23-291 |
| High Relay/Washer             |        |
| Relay Test                    | 23-292 |

## Body Electrical (Cont'd)

|                                |        |                          |        |                               |        |                             |        |
|--------------------------------|--------|--------------------------|--------|-------------------------------|--------|-----------------------------|--------|
| Low Relay Test .....           | 23-292 | Washer Replacement ..... | 23-297 | '93-'94 Models .....          | 23-311 | Door Switch Test .....      | 23-323 |
| Windshield Wiper Motor         |        | Windshield Washer Motor  |        | '95-'96 Models .....          | 23-319 | Indicator Replacement ..... | 23-324 |
| Test .....                     | 23-293 | Test .....               | 23-297 | Rear Window Defogger Switch   |        | Trunk Key Cylinder Switch   |        |
| Replacement                    |        | Security Alarm System    |        | Light Bulb Replacment         |        | Test .....                  | 23-324 |
| Windshield Wiper/Washer Switch |        | Component Location       |        | '91-'94 Models .....          | 23-278 | Engine Compartment Lid      |        |
| Replacement                    |        | Index .....              | 23-310 | Control Unit Input Test       |        | Switch Test .....           | 23-325 |
| '91-'92 Models .....           | 23-282 | Description .....        | 23-312 | '91-'92 Models .....          | 23-308 | Hood Switch Test .....      | 23-325 |
| '93-'94 Models .....           | 23-286 | Wiring Connections ..... | 23-318 | '93-'94 Models .....          | 23-312 | Ignition Key Switch Test    |        |
| '95-'96 Models .....           | 23-294 | Troubleshooting          |        | '95-'96 Models .....          | 23-320 | '91-'94 Models .....        | 23-318 |
| Test                           |        | '91-'92 Models .....     | 23-307 | Trunk Latch Switch Test ..... | 23-323 | '95-'96 Models .....        | 23-326 |
| '91-'94 Models .....           | 23-288 |                          |        |                               |        |                             |        |
| '95-'96 Models .....           | 23-296 |                          |        |                               |        |                             |        |