

Maintenance Schedule (Normal Conditions)

Follow the Normal Conditions Maintenance Schedule if the severe driving conditions specified in the Severe Conditions Maintenance Schedule on pages 4-6 and 4-7 do not apply.

Service at the indicated distance or time whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	*1 SECTION and PAGE
	miles x 1,000	15	30	45	60	75	90	105		
	months	12	24	36	48	60	72	84		
Replace engine oil	Replace every 7,500 miles (12,000 km) or 12 months								Capacity for change with filter: 5.0 ℓ (5.3 US qt, 4.4 Imp qt)	8-4
Replace engine oil filter	●	●	●	●	●	●	●	●		8-5
Check engine oil and coolant	Check oil and coolant at each fuel stop								Check levels and check for leaks.	8-4, 10-5
Replace air cleaner element		●		●		●				11-149
Inspect valve clearance		●		●		●			Intake 0.15–0.19 mm (0.006–0.007 in)*2 Exhaust 0.17–0.21 mm (0.007–0.008 in)*2	6-9
Replace spark plugs	Replace every 60,000 miles (96,000 km) or 72 months								NGK: PFR6G-11 NIPPONDENSO: PK20PR-L11 Gap: 1.0–1.1 mm (0.039–0.043 in) Service limit 1.3 (0.051)*3	23-96
Replace timing belt* and inspect water pump							●			6-15, 10-11
Inspect and adjust drive belts		●		●		●			Check for cracks and damage. Check deflection and tension at center of alternator belt pressing with 100 N (10 kg, 22 lbs) tension: Alternator drive belt: 12–14 mm (0.47–0.55 in)	23-109
Replace fuel filter*				●						11-138
Inspect idle speed*				●					Manual transmission: 800 ± 50 rpm (neutral) Automatic transmission: 780 ± 50 rpm (in N or P position)	11-128
Replace engine coolant			●		●		●		Capacity for change: 12.0 ℓ (12.7 US qt, 10.6 Imp qt) Check specific gravity for freezing point.	10-6
Replace transmission fluid							●		Manual transmission: Honda Genuine MTF 2.7 ℓ (2.9 US qt, 2.4 Imp qt) for change Automatic transmission: 2.9 ℓ (3.1 US qt, 2.6 Imp qt) for change with HONDA Premium Formula ATF or DEXRON II ATF	13-2a 14-105
Inspect front and rear brakes	●	●	●	●	●	●	●	●	• Check the brake pad and disc thickness. Check for damage and cracks. • Check the calipers for damage, leaks and tightness.	19-6, 19-9 19-17, 19-19
Replace brake fluid (including ABS)			●				●		Use only Genuine Honda Brake Fluid or an equivalent marked DOT 3 or DOT 4 fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-10
Check parking brake adjustment	●	●	●	●	●	●	●	●	Fully engaged 10 to 14 notches	19-4
Check tire inflation and condition	At least once per month									—

*1: Refer to Base Service Manual ('95 NSX, P/N 61SL004)

*2: Measured between the rocker arm and camshaft.

*3: Do not adjust the gap, replace the spark plug if it is out of spec.

Service at the indicated distance or time whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	*1 SECTION and PAGE
	miles x 1,000	15	30	45	60	75	90	105		
	months	12	24	36	48	60	72	84		
Visually inspect the following items:									<ul style="list-style-type: none"> • Check for correct installation and position, check for cracks, deterioration, rust, and leaks. • Check tightness of screws, nuts, and joints. If necessary, retighten. 	—
Brake hoses and lines (including ABS)										19-26
All fluid levels and condition of fluid									Check levels and check for leaks. If necessary, add transmission fluid, engine coolant, brake fluid, clutch fluid, windshield washer fluid.	10-6, 12-5 13-3, 14-105 19-69
Tie-rod ends, steering gearbox, and boots									<ul style="list-style-type: none"> • Check rack grease and steering linkage. • Check the boot for damage and leaking grease. • Check the fluid line for damage and leaks. 	17-59
Suspension components										—
Driveshaft boots	●	●	●	●	●	●	●	●	Check boots and boot band for cracks. Check rack grease.	16-3
Cooling system hoses and connections									Check all hoses for damage, leaks and deterioration. Check all hose clamps. Retighten if necessary.	10-2
Exhaust system *									Check the catalytic converter heat shield, exhaust pipe and muffler for damage, leaks and tightness.	9-5
Fuel lines and connections *									Check fuel lines for loose connections, cracks and deterioration. Retighten loose connections and replace any damaged parts.	11-130
Inspect supplemental restraint system								10 years after production		—

*1. Refer to Base Service Manual ('95 NSX, P/N 61SL004)

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Acura recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

For Canadian models:

This Maintenance Schedule outlines the minimum required maintenance that you should perform to ensure the trouble-free operation of Canadian model. Due to regional and climatic differences, some additional servicing may be required.

