

Follow the Normal Conditions Maintenance Schedule if the severe driving conditions specified in the Severe Conditions Maintenance Schedule on pages 4-6 and 4-7 do not apply.

Service at the indicated distance or time – whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	SECTION and PAGE
	miles x 1,000	15	30	45	60	75	90	105		
	months	12	24	36	48	60	72	84		
Replace engine oil and oil filter	Replace every 7,500 miles (12,000 km) or 6 months								Capacity for change with filter: 5.0 ℓ (5.3 US qt, 4.4 Imp qt)	8-4, 8-5 ('91-'92), ('92), or ('94-'96)
Check engine oil and coolant	Check oil and coolant at each fuel stop								Check levels and check for leaks.	8-4, 10-5 ('91-'92), ('92), or ('94-'96)
Replace air cleaner element		●			●		●			11-149
Inspect valve clearance		●			●		●		Intake 0.15–0.19 mm (0.006–0.007 in)* ¹ Exhaust 0.17–0.21 mm (0.007–0.008 in)* ¹	6-9 ('91-'93), or ('94-'96)
Replace spark plugs	Replace every 60,000 miles (96,000 km) or 72 months								NGK: PFR6G-11 NIPPONDENSO: PK20PR-L11 Gap: 1.0–1.1 mm (0.039–0.043 in) Service limit 1.3 (0.051)* ²	23-96 ('91) or ('92-'96)
Replace timing belt* and inspect water pump							●			6-15, 10-11
Inspect and adjust drive belts		●			●		●		Check for cracks and damage. Check deflection and tension at center of alternator belt pressing with 100 N (10 kg, 22 lbs) tension: Alternator drive belt: 12–14 mm (0.47–0.55 in)	23-109
Replace fuel filter*					●					11-138('91-'92), ('93), or ('94-'96)
Inspect idle speed*					●				Manual transmission: 800 ± 50 rpm (neutral) Automatic transmission: 780 ± 50 rpm (in [N] or [P] position)	11-128
Inspect PCV valve					●				If clicking sound is heard as you pinch the hose between the PCV valve and intake manifold, valve is OK.	11-166
Replace engine coolant			●			●		●	Capacity for change: 12.0 ℓ (12.7 US qt, 10.6 Imp qt) Check specific gravity for freezing point.	10-6
Replace transmission fluid			●		●		●		Manual transmission: 2.7 ℓ (2.9 US qt, 2.4 Imp qt) for change Automatic transmission: 2.9 ℓ (3.1 US qt, 2.6 Imp qt) for change with HONDA Premium Formula ATF or DEXRON II ATF	13-3 14-105 ('91-'92), ('93), or ('94-'96)
Inspect front and rear brakes	●	●	●	●	●	●	●	●	• Check the brake pad and disc thickness. Check for damage and cracks. • Check the calipers for damage, leaks and tightness.	19-6, 19-9 19-17, 19-19
Replace brake fluid (Including ABS)		●			●		●		Use only DOT 3 or DOT 4 fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-10
Replace ABS high-pressure hose					●				Bleed high-pressure fluid	19-69 ('91-'92), or ('93-'96)
Check parking brake adjustment	●	●	●	●	●	●	●	●	Fully engaged 10 to 14 notches	19-4
Check tire inflation and condition	At least once per month									

*1: Measured between the rocker arm and camshaft.

*2: Do not adjust the gap, replace the spark plug if it is out of spec.

Service at the indicated distance or time – whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	SECTION and PAGE
	miles x 1,000	15	30	45	60	75	90	105		
	months	12	24	36	48	60	72	84		
Visually inspect the following items:									<ul style="list-style-type: none"> • Check for correct installation and position, check for cracks, deterioration, rust, and leaks. • Check tightness of screws, nuts, and joints. If necessary, retighten. 	—
Brake hoses and lines										19-26
All fluid levels									<ul style="list-style-type: none"> • Check levels and check for leaks. If necessary, add transmission fluid, engine coolant, brake fluid, clutch fluid, windshield washer fluid. 	10-6, 12-5 13-3, 14-105 (’91-’93), or (’94-’96), 19-69/’91-’92 or (’93-’96)
Tie-rod ends, steering gearbox, and boots	•	•	•	•	•	•	•	•	<ul style="list-style-type: none"> • Check rack grease and steering linkage. • Check the boot for damage and leaking grease. • Check the fluid line for damage and leaks. 	17-59
Suspension components										—
Driveshaft boots									<ul style="list-style-type: none"> • Check boots and boot band for cracks. Check rack grease. 	16-3
Cooling system hoses and connections									<ul style="list-style-type: none"> • Check all hoses for damage, leaks and deterioration. Check all hose clamps. Retighten if necessary. 	10-2
Exhaust system*									<ul style="list-style-type: none"> • Check the catalytic converter heat shield, exhaust pipe and muffler for damage, leaks and tightness. 	9-5
Fuel pipes, hoses, and connections*									<ul style="list-style-type: none"> • Check fuel lines for loose connections, cracks and deterioration. • Retighten loose connections and replace any damaged parts. 	11-130 (’91-’92), (’93), or (’94-’96)
Inspect supplemental restraint system	10 years after production									—

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Acura recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

For Canadian models:

This Maintenance Schedule outlines the minimum required maintenance that you should perform to ensure the trouble-free operation of Canadian model. Due to regional and climatic differences, some additional servicing may be required.

