

Crankshaft Pulley and Pulley Bolt

Replacement


When installing and tightening the pulley, follow the procedure below.

Clean, remove any oil and lubricate points shown below.

○ : Clean

× : Remove any oil

● : Lubricate

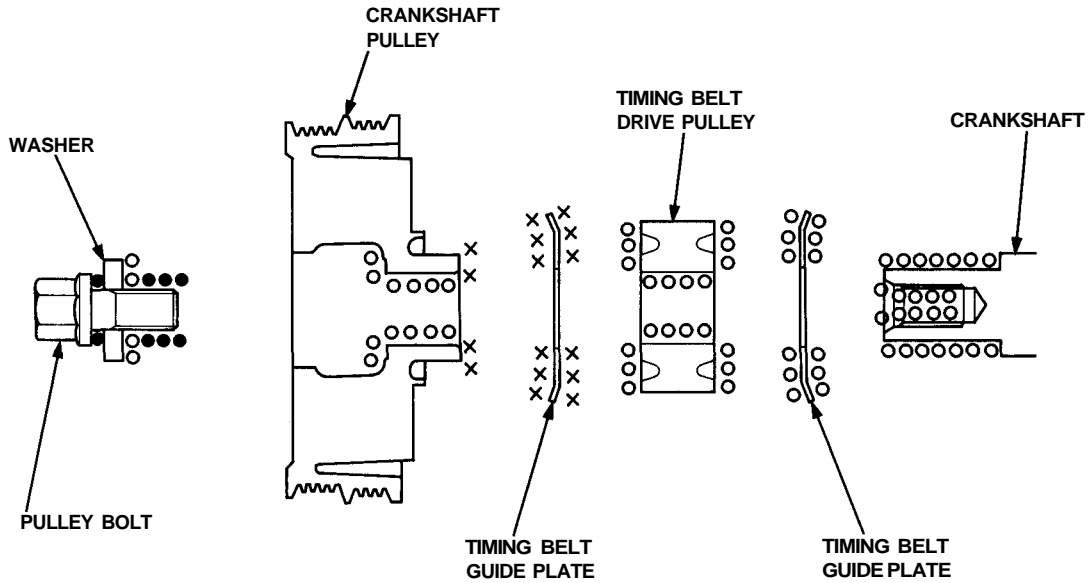

Crankshaft pulley bolt size and torque value:

16 x 1.5 mm

250 N-m (25.0 kg-m, 181 lb-ft)

NOTE:

- Do not use an impact wrench when installing.
- Make sure the handle thumb screw aligns with the hole in the attachment.

