



# Cylinder Heads


## Illustrated Index

**CAUTION:** To avoid damage, wait until the engine coolant temperature drops below 100°F (38°C) before removing the cylinder head.

**NOTE:** Use new O-rings and gaskets when reassembling.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

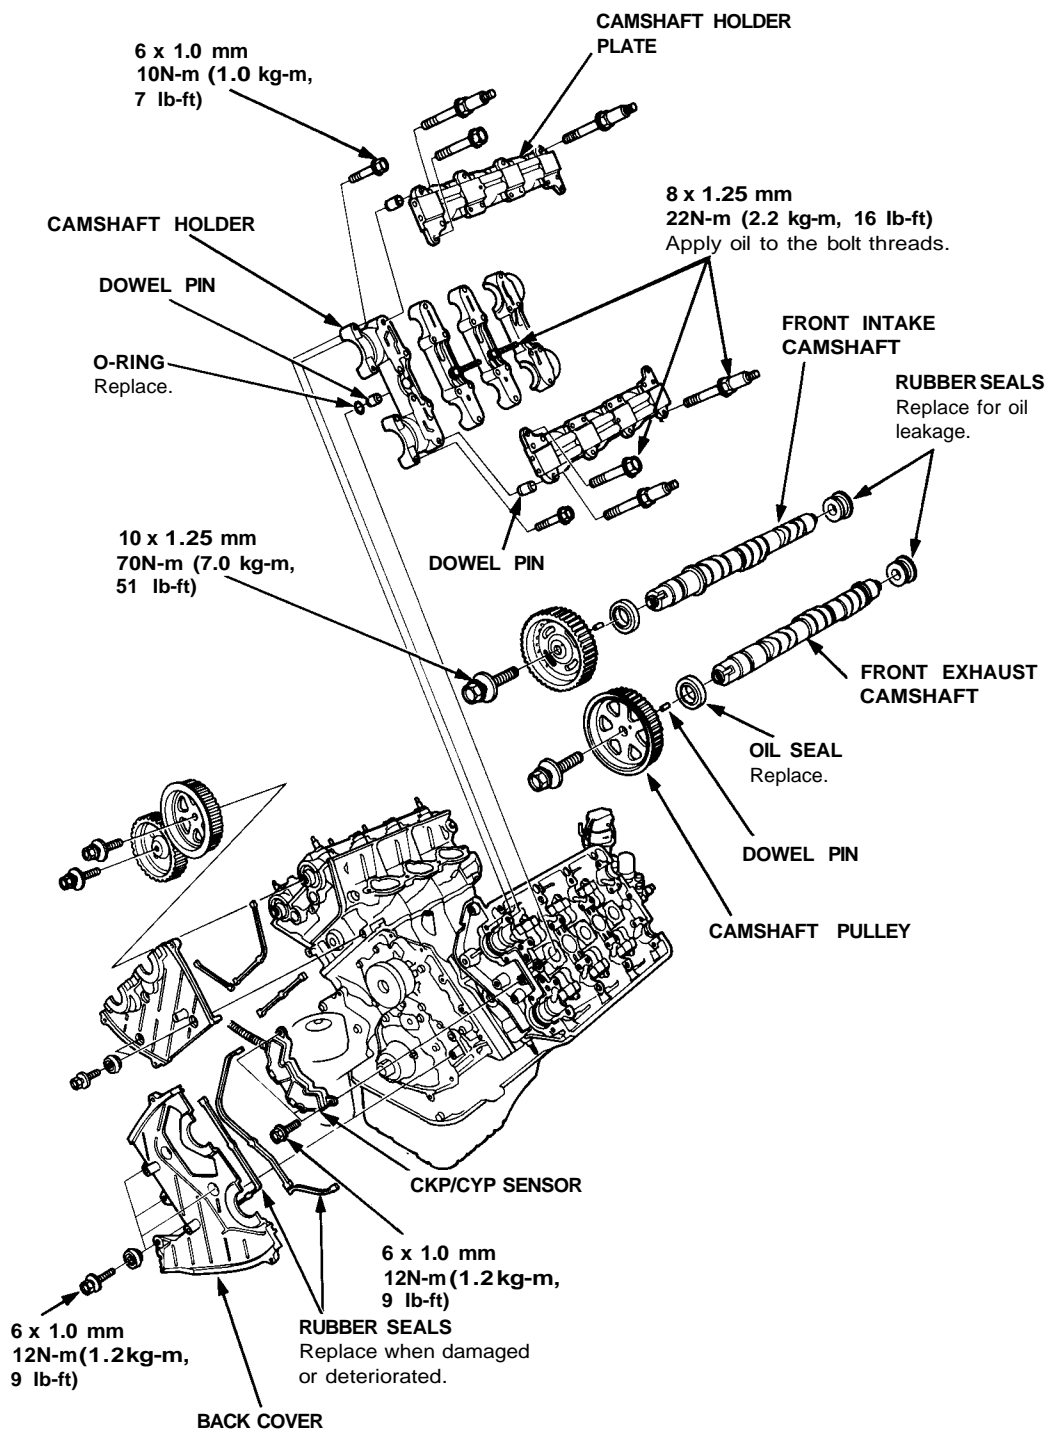

(cont'd)

# Cylinder Heads

## Illustrated Index (cont'd)

**CAUTION:** To avoid damage, wait until the engine coolant temperature drops below 100°F (39°C) before removing the cylinder head.

**NOTE:** Use new O-rings and gaskets when reassembling.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

