



Rocker Arms and Shafts

Removal

1. Screw a 5 mm bolt into each rocker shaft oil control orifice, then pull out the rocker shaft oil control orifices.

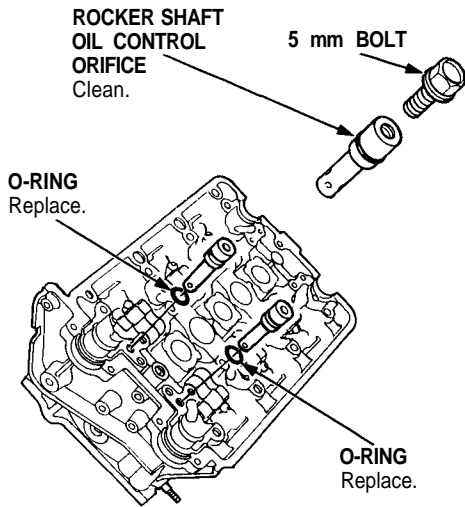

2. Remove the VTEC solenoid valve, then remove the sealing bolts.

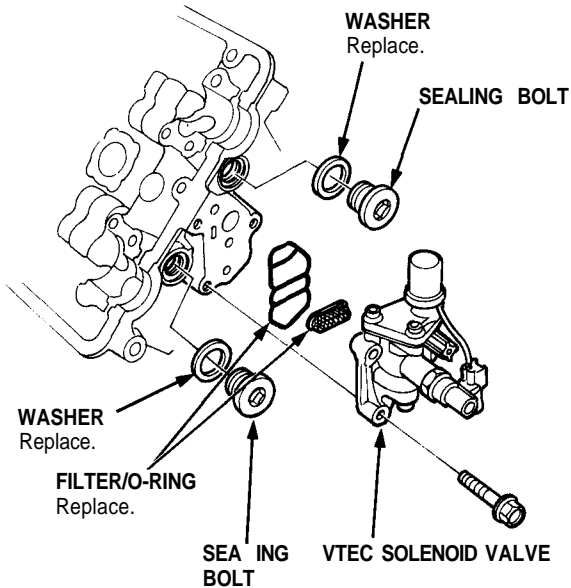

3. Bundle the rocker arms with rubber bands to keep them together as sets.
4. Screw a 12 x 1.25 mm bolt into each rocker shaft. Remove the rocker arms while slowly pulling the rocker shafts out of the cylinder heads toward the transmission end.

