




Oil Filter

Replacement

CAUTION: Loosen the oil filter carefully while the engine is hot, the hot oil may cause scalding.

1. Remove the oil filter with the special tool as shown.

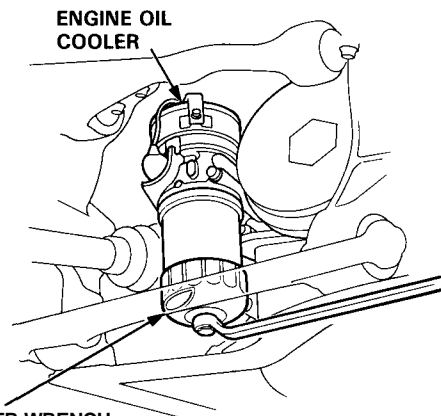

OIL FILTER WRENCH


07912-6110001

Torque: One turn

(22 N-m (2.2 kg-m, 16 lb-ft))

2. Inspect the threads and rubber seal on the new filter. Wipe off the seat on oil filter base, then apply a light coat of oil to the rubber seal and install the filter.
3. After the rubber seal is seated against the base, tighten the oil filter by turning it approximately one turn.

Torque: One turn (22 N-m (2.2 kg-m, 16 lb-ft)).

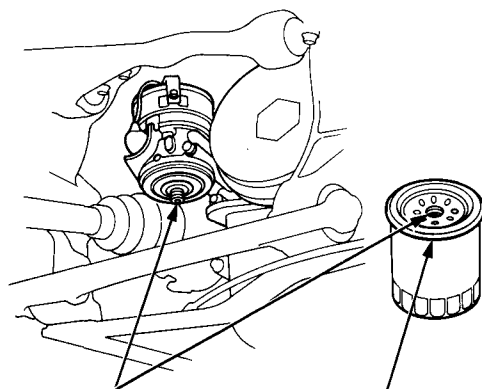

Inspect threads and gasket surface.



Apply oil to rubber seal before installing.

4. Start the engine, and check the filter for oil leakage.