

Oil Pressure

Testing

If the oil pressure warning light stays on with the engine running, check the engine oil level. If the oil level is correct:

1. Remove the engine oil pressure switch, and install an oil pressure gauge.
2. Start the engine. Shut it off immediately if the gauge registers no oil pressure. Repair the problem before continuing.
3. Allow the engine to reach operating temperature (fan comes on at least twice). The pressure should be:

Engine Oil Pressure:

**At Idle: 70 kPa (0.7 kg/cm², 10 psi)
minimum**

**At 3,000 rpm: 350 kPa (3.5 kg/cm², 50 psi)
minimum**

- If oil pressure is within specifications, replace the oil pressure sender and recheck.
- If oil pressure is NOT within specifications, inspect the oil pump (see page 8-8).

