

Cooling

Illustrated Index

⚠ WARNING System is under high pressure when the engine is hot. To avoid danger of releasing scalding engine coolant, remove the cap only when the engine is cool.

Total Cooling System Capacity: Including expansion tank 2.1 ℓ (2.2 US qt, 1.8 Imp qt)
 5 M/T: 16.0 ℓ (17.0 US qt, 14.1 Imp qt)
 4 A/T: 16.5 ℓ (17.4 US qt, 14.5 Imp qt)

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.

Radiator, Water Pipes and Hoses:



