

# Radiator

## Replacement

1. Remove the spare tire.
2. Drain the radiator (see page 10-5 thru 10-7).
3. Disconnect the fan motor connector and the resistor connector.
4. Remove the upper and lower hoses from the radiator.
5. Remove the bracket and the radiator.

Install the radiator in the reverse order of removal:

**NOTE:**

- Set the upper and lower cushions securely.
- Fill the radiator and bleed the air (see page 10-5 thru 10-7).

