


Component Locations



Index

For Troubleshooting of DTC related components. see chart on page 11-52.

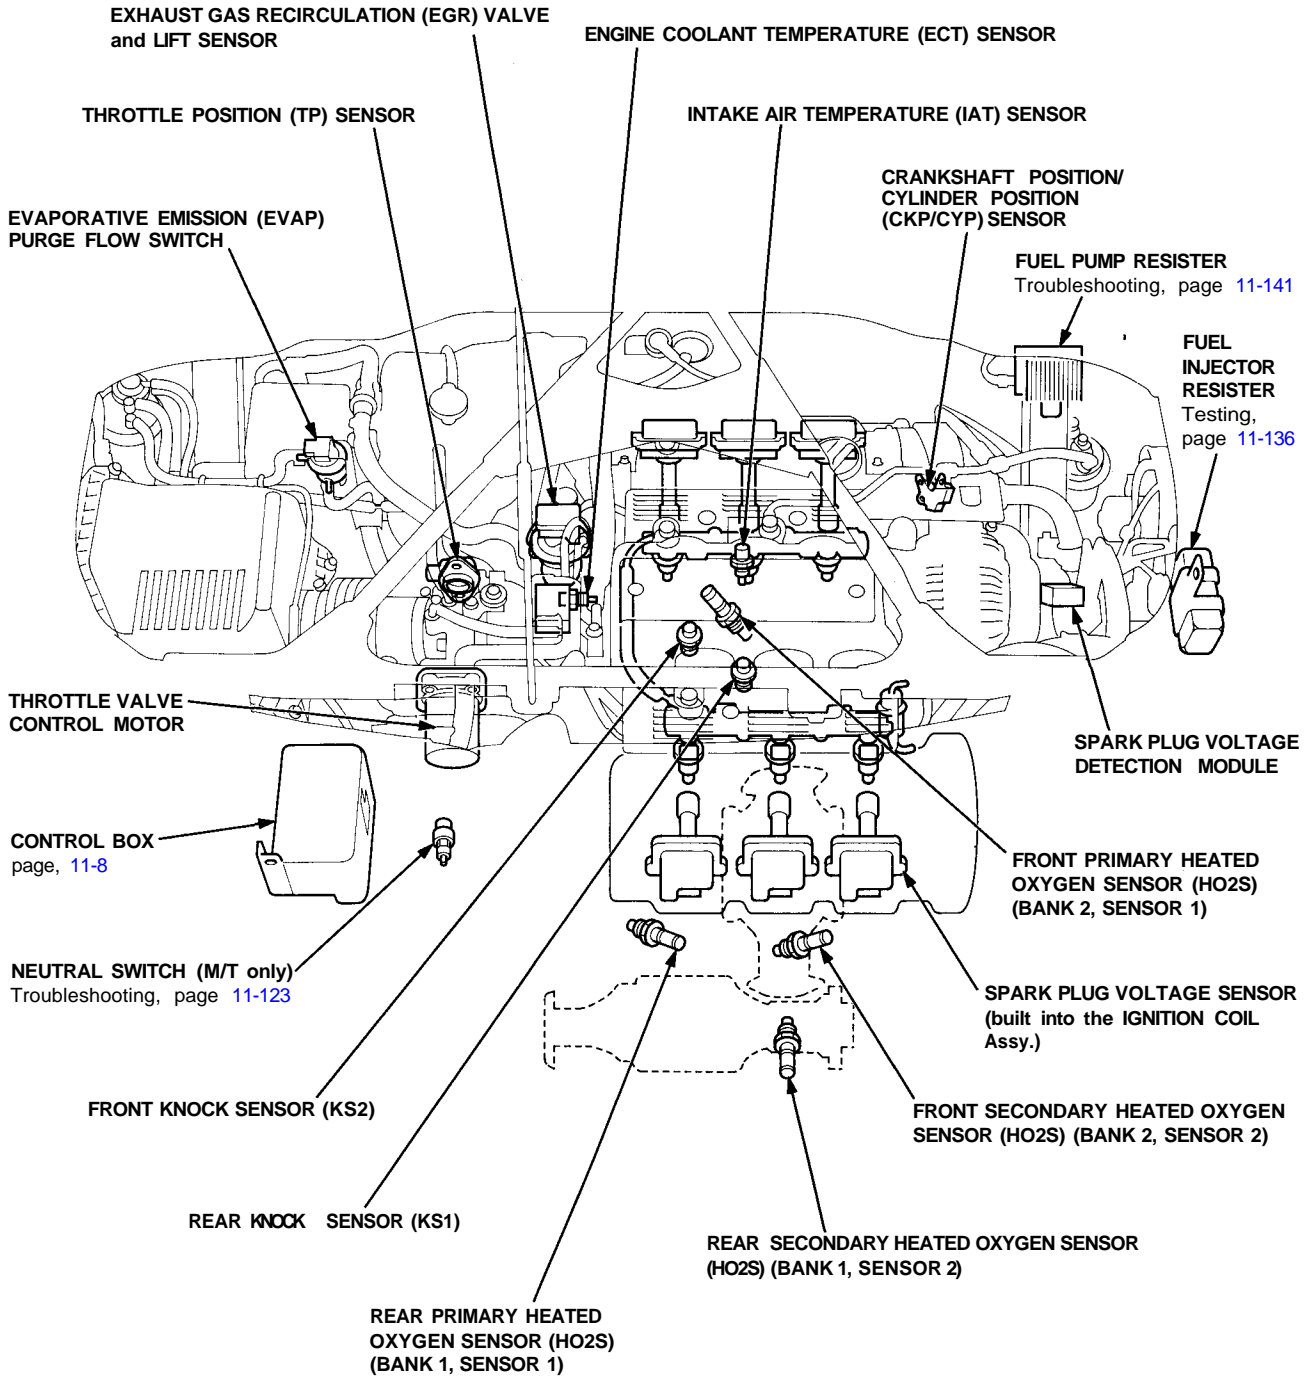


(cont'd)


Component Locations

Index (cont'd)

For Troubleshooting of DTC related components, see chart on page 11-52.

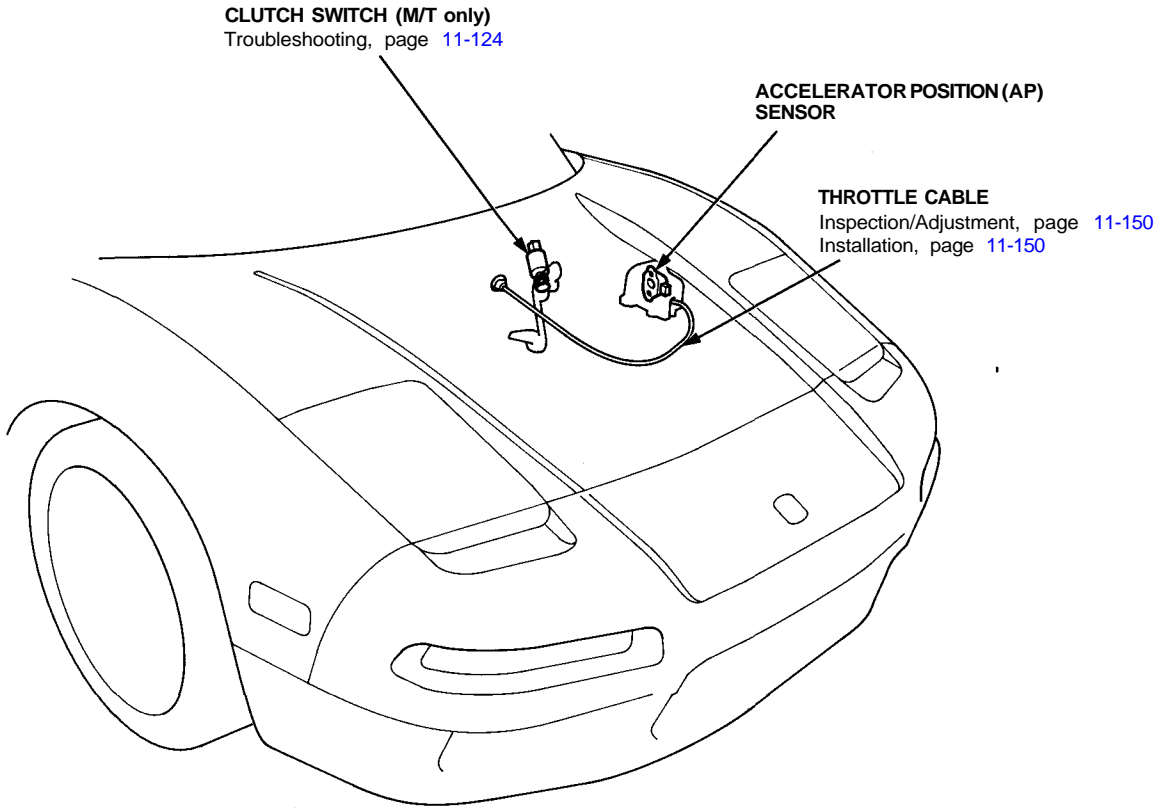


**PGM-FI
MAIN RELAY**
Relay Testing, page 11-143
Troubleshooting, page 11-144

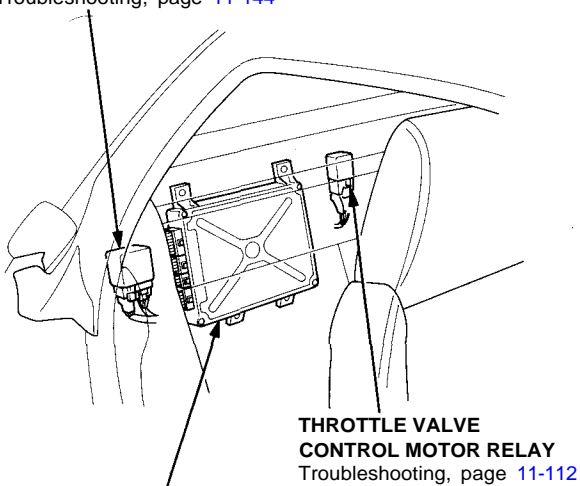



ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-38
Troubleshooting, page 11-61, and 11-62

SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-38

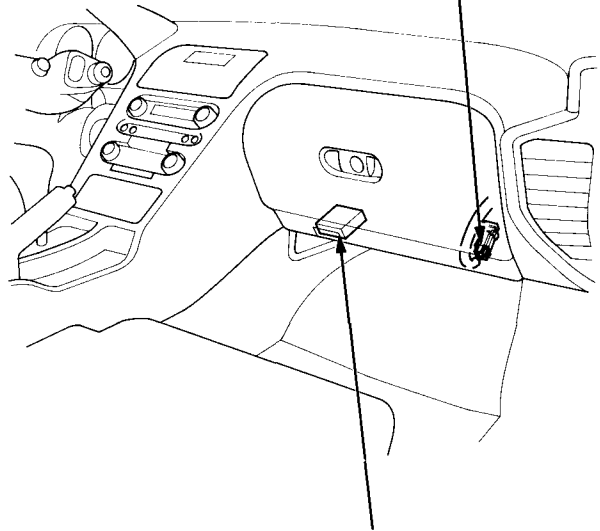



For Troubleshooting of DTC related components, see chart on page 11-52.

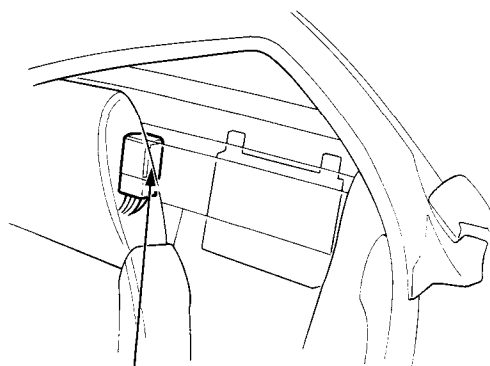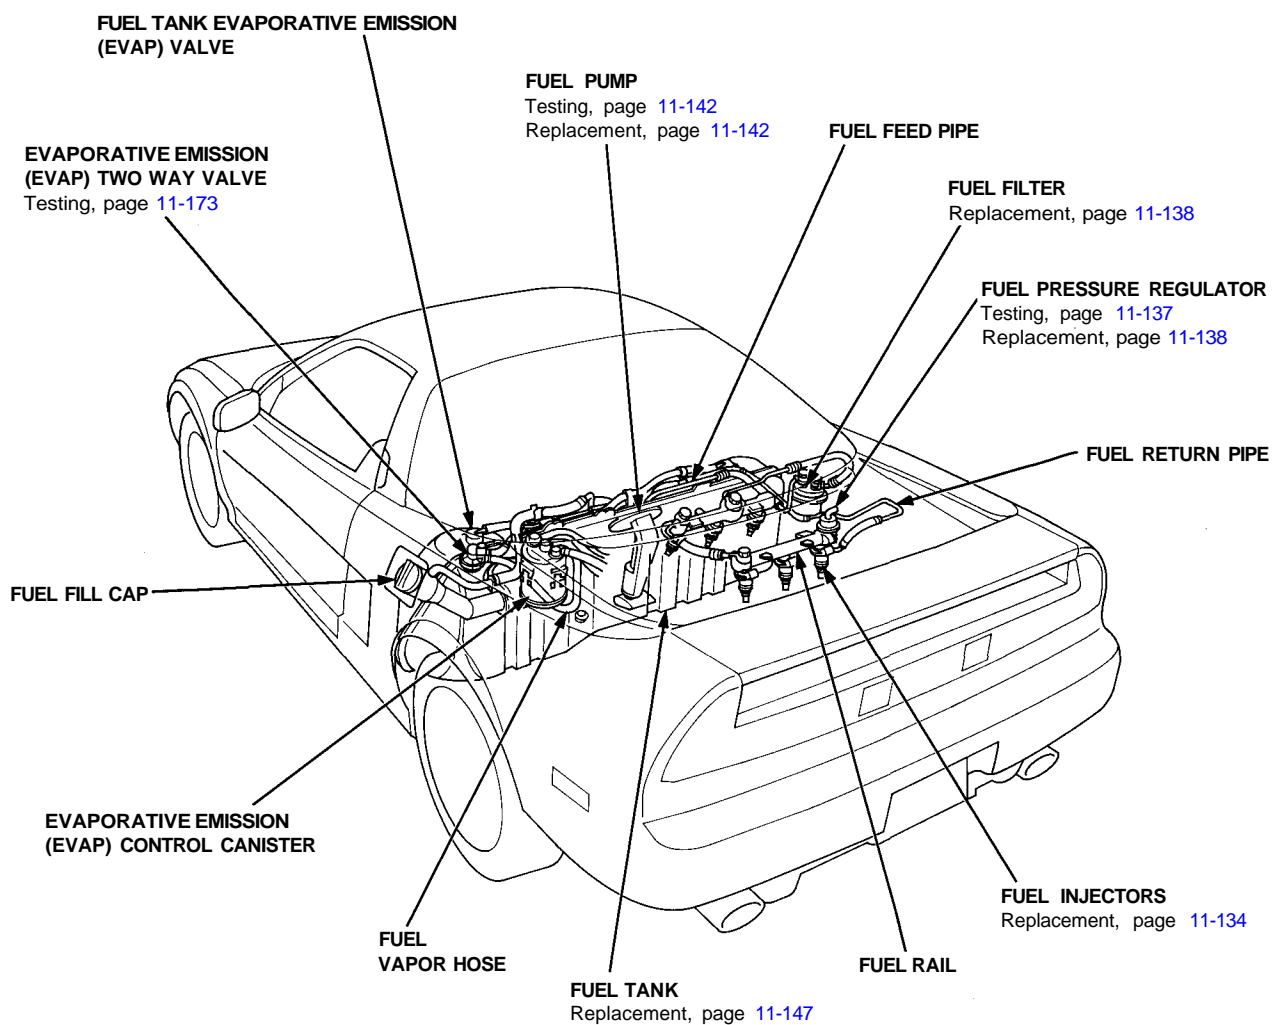

FUEL PUMP RELAY
Troubleshooting, page 11-139

(cont'd)

Component Locations

Index (cont'd)

For Troubleshooting of DTC related components, see chart on page [11-52](#).

