



Starter Switch Signal

This signals the ECM when the engine is cranking.

Inspection of Starter Switch Signal.

- NOTE:
- M/T: Clutch pedal must be depressed.
 - A/T: Transmission in **N** or **P** position.

Measure voltage between ECM connector terminals C6 and A26 with the ignition switch in the start position.

Is there battery voltage?

YES

Starter switch signal is OK.

NO

 
Inspect the No. 7 STARTER SIGNAL (7.5 A) fuse in the underdash fuse box.

Is the fuse OK?


YES

Repair open in the wire between the ECM (C6) and the No. 7 STARTER SIGNAL (7.5 A) fuse.

ECM CONNECTORS



LG1 (BRN/BLK)

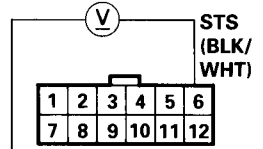

WIRE SIDE OF FEMALE TERMINALS



STS (BLK/WHT)

- Repair short in the wire between the ECM (C6) and the No. 7 STARTER SIGNAL (7.5 A) fuse or the PGM-FI main relay.
- Replace the No. 7 STARTER SIGNAL (7.5 A) fuse.