



Illustrated Index

NOTE:

- Whenever the transmission is removed, clean and grease the release bearing sliding surface.
- If the parts marked * are removed, the clutch hydraulic system must be bled.
- Bleed the clutch hydraulic system (see page 12-6).
- Inspect the hoses for damage, leaks, interference, and twisting.

