


# Shift Fork Assembly

## Disassembly/Reassembly

### NOTE:

- Be careful not to lose the 5th shift fork steel ball.
- Install the spring pins so their grooves are 180° apart.

 Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact surfaces.

**Disassembly:** Remove the 3 mm spring pin and 5 mm spring pin.

**Reassembly:** Install the 5 mm spring pin first, then install the 3 mm spring pin.

