



# Mainshaft Assembly

## Index

NOTE: The 3rd/4th and 5th synchro hubs are installed with a press.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact surfaces. The 3rd/4th and 5th synchro hubs, however, should be installed with a press before lubricating them.

