



Countershaft Assembly

Index

NOTE: The 3rd, 4th and 5th gears are installed with a press.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact surfaces. The 3rd, 4th and 5th gears should be installed without lubrication using a press.

