


# Troubleshooting

## Hard Steering

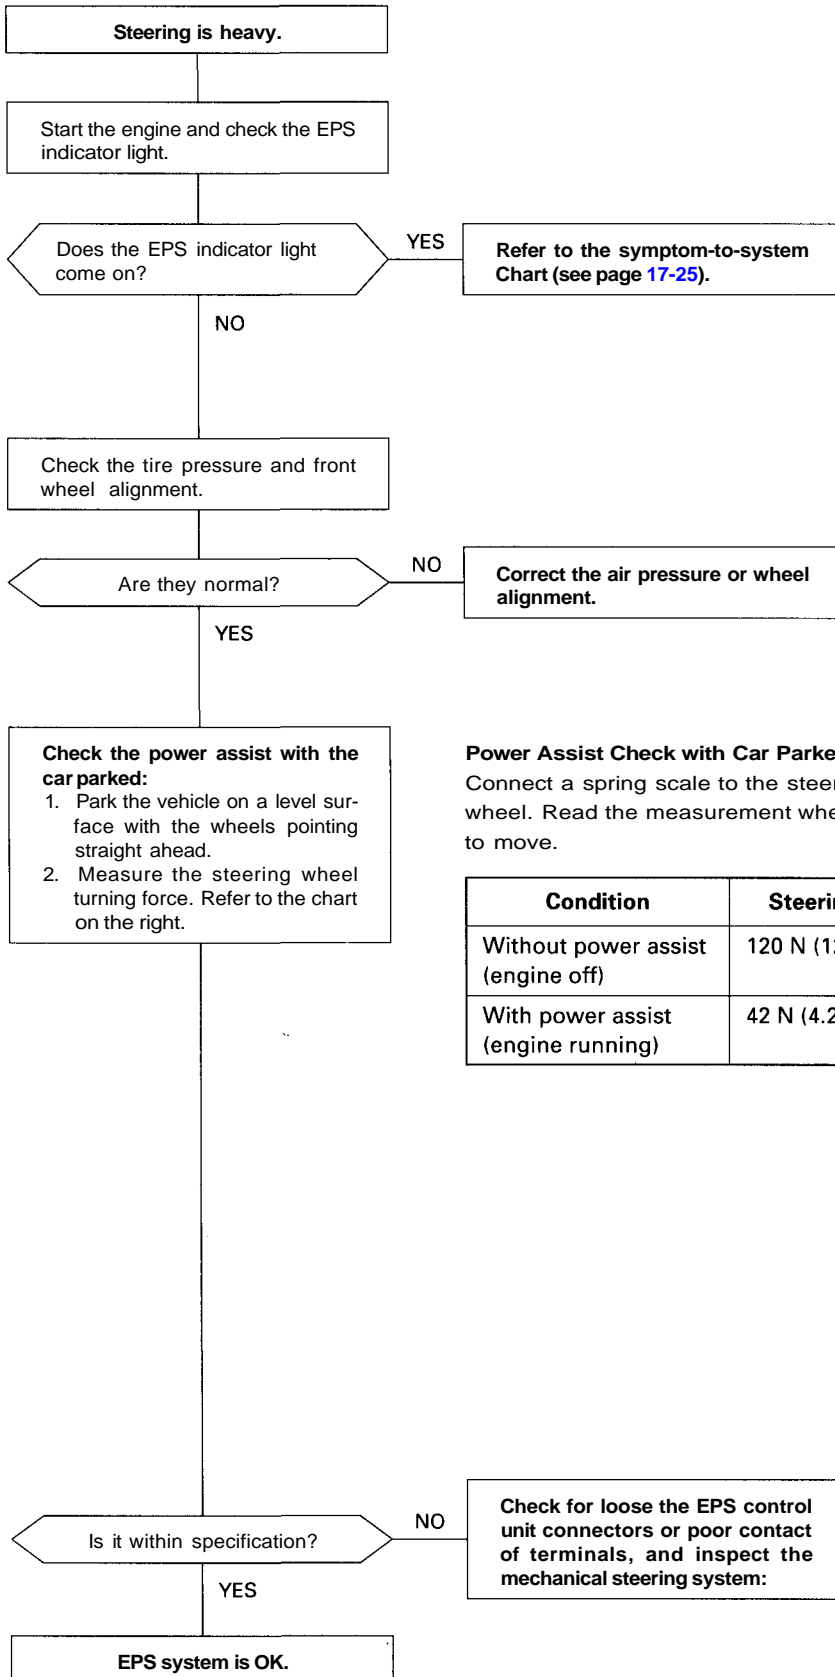

### Power Assist Check with Car Parked:

Connect a spring scale to the steering wheel and turn the wheel. Read the measurement when the front wheels start to move.

Condition	Steering wheel turning force
Without power assist (engine off)	120 N (12 kgf, 26 lbf) maximum
With power assist (engine running)	42 N (4.2 kgf, 9.3 lbf) maximum

