

# Troubleshooting

## Symptom-to-System Chart

DIAGNOSTIC TROUBLE CODE (DTC)		PROBLEMATIC COMPONENT/ SYSTEM	AFFECTED				PAGE	OTHER COMPONENT	PAGE
MAIN CODE	SUB-CODE		FRONT RIGHT	FRONT LEFT	REAR RIGHT	REAR LEFT			
①	—	Hydraulic Controlled Components	—	—	—	—	19-47	ABS (40A) fuse Motor relay Pressure Switch Accumulator Modulator	19-71
②	—	Parking brake switch-related problem	—	—	—	—	19-50	Brake fluid level switch Brake system light	
③	①	Pulser(s)	○				19-71	Wheel sensor installation	
	②			○					
	④				○				
	⑧					○			
④	①	Wheel sensor	○				19-51		
	②			○					
	④				○				
	⑧					○			
⑤	—	Wheel sensor(s)			○	○	19-52	Modulator Rear brake drag	
	④				○				
	⑧					○			
⑥	—	Fail-safe relay	○			○	19-53		19-71 (Function Test)
	①		○						
	④					○			
⑦	①	Solenoid related problem	○				19-57		
	②			○				Rear fail-safe relay	
	④				○		19-59		
	⑧					○		Front fail-safe relay ABS 1,4 (20A) Fuse	