

Modulator/Solenoid Unit

Index/Torque

CAUTION:

- Do not damage the brake pipes when removing the spare tire and modulator/solenoid unit.
- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.

☆: CORROSION RESISTANT BOLT

MODULATOR/SOLENOID UNIT

Solenoid Leak Test,
page 19-64
Solenoid Flushing,
page 19-65

