


# Accumulator/Pressure Switch

## Accumulator/Pressure Switch Removal

1. Drain the high pressure brake fluid from the power unit (see page 19-62).
2. Remove three 6 mm flange bolts, then remove the accumulator from the pressure switch joint.

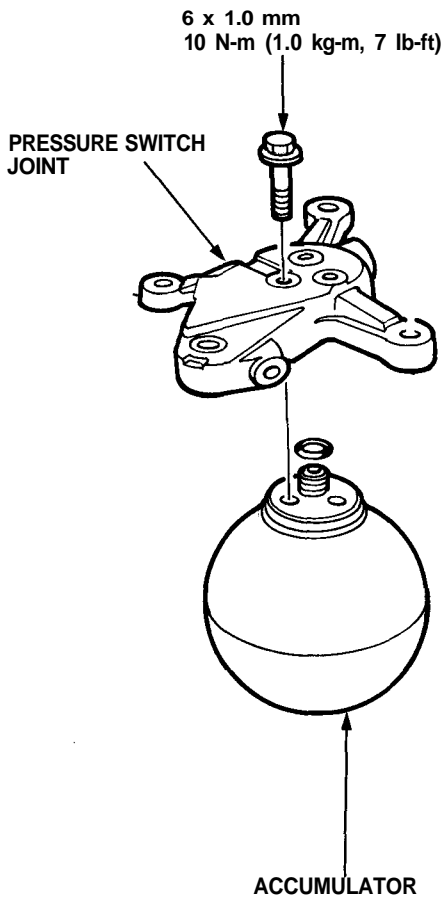

## Accumulator Disposal

**⚠ WARNING** The accumulator contains high-pressure nitrogen gas, do not puncture, expose to flame, or attempt to disassemble the accumulator or it may explode; severe personal injury may result.

1. Secure the accumulator in a vise so that the relief plug points straight up.
2. Slowly turn the plug 3-1/2 turns, then wait 3 minutes for all pressure to escape.
3. Remove the plug completely, and dispose of the accumulator unit.

