


Pulsers/Sensors

Front Sensor Replacement

NOTE:

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement confirm proper operation (see page 19-43).

☆: CORROSION RESISTANT BOLT ☆ 6 x 1.0 mm
10 N-m (1.0 kg-m, 7 lb-ft)

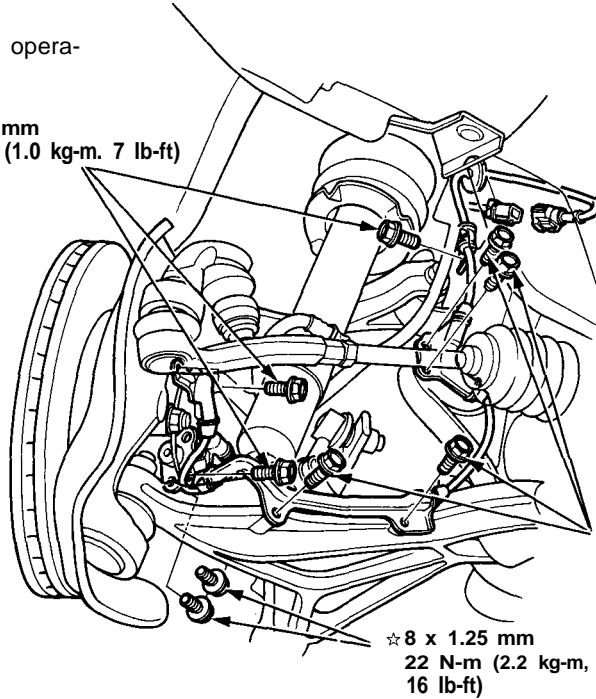

☆ 6 x 1.0 mm
10 N-m (1.0 kg-m,
7 lb-ft)

☆ 8 x 1.25 mm
22 N-m (2.2 kg-m,
16 lb-ft)

Rear Sensor Replacement


NOTE:

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement, confirm proper operation (see page 19-43).

☆: CORROSION RESISTANT BOLT

☆ 8 x 1.25 mm
22 N-m (2.2 kg-m, 16 lb-ft)

☆ 6 x 1.0 mm
10 N-m (1.0 kg-m, 7 lb-ft)

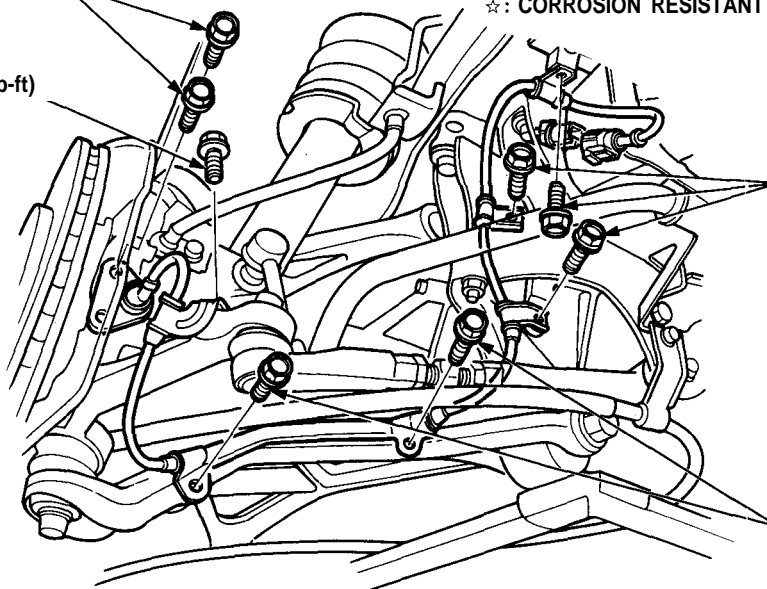

☆ 6 x 1.0 mm
10 N-m (1.0 kg-m,
7 lb-ft)

☆ 6 x 10 mm
10 N-m (1.0 kg-m,
7 lb-ft)