

# Troubleshooting

## Troubleshooting Guide

Diagnostic Trouble Code (DTC)	System Indicated	Related components										Refer to page
		CLOCK (7.5 A) fuse	BACK-UP LIGHTS (15 A) fuse	Parking brake switch	Lateral acceleration (Lg) sensor	Steering angle sensor	Engine Control Module (ECM)	ABS control unit	Transmission Control Module (TCM)	Wire harness	TCS control unit	
—	TCS indicator light does not come on when ignition switch is turned ON (II)		○							○	○	19-87(91-93)(94-96)
—	TCS indicator light does not go off after engine is started	○					○			○	○	19-89(91-93)(94-96)
1-2	TCS control unit										○	19-90(91-93)(94-96)
2	Parking brake			○						○	○	19-91(91-93)(94-96)
2-1	Steering angle sensor					○				○	○	19-94(91-93)(94-96)
2-3	Lateral acceleration (Lg) sensor				○					○	○	19-97(91-93)(94-96)
3-1	TCS serial data line (SDL)						○			○	○	19-100(91-93)(94-96)
3-2	Engine Speed Signal (NEP)						○		○	○	○	19-102(91-93)(94-96)
4-1	Right-front wheel sensor											19-103(91-93)(94-96)
4-2	Left-front wheel sensor											
4-4	Right-rear wheel sensor							○		○		
4-8	Left-rear wheel sensor											
4-9	All wheel sensors							○		○	○	19-105(91-93)(94-96)
6-1	Transmission Control Module (TCM)								○	○	○	19-106(91-93)(94-96)