



Rear Hatch Glass

Removal

CAUTION:

- Use covers to avoid damaging the body.
- Wear gloves to remove and install the glass.
- Do not damage the defroster grid lines.
- Take care not scratch or score the molding.

1. Remove the rear hatch assembly from the body (see page 20-64).
2. Using an awl, make a hole through the adhesive and outer/inner rubber dams from the inside, at the top of the glass. Push piano wire through the hole, and wrap each end around a piece of wood.
3. Apply the protective tape along the edge of the rear hatch frame as shown.
4. With a helper holding the glass, pull the piano wire back and forth in a sawing motion and carefully cut through the adhesive along the top and the sides of the glass.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the rear hatch frame.

