


Front Bumper

Replacement

1. Loosen the mounting screw, then pull the right and left front turn signal lights out and disconnect the connectors.
2. Remove the skirt covers, then remove the bumper mounting bolts on each side, and lower skirt mounting bolt.
3. Lower the inner fender, then remove the bumper mounting nuts and the skirt mounting bolts from inside the front fender on each side.
4. Lift and remove the front bumper.

NOTE:

- Disconnect the washer hose, horn connectors, and ambient sensor connector.
- An assistant is helpful when removing the front bumper.
- Take care not to scratch the front bumper.

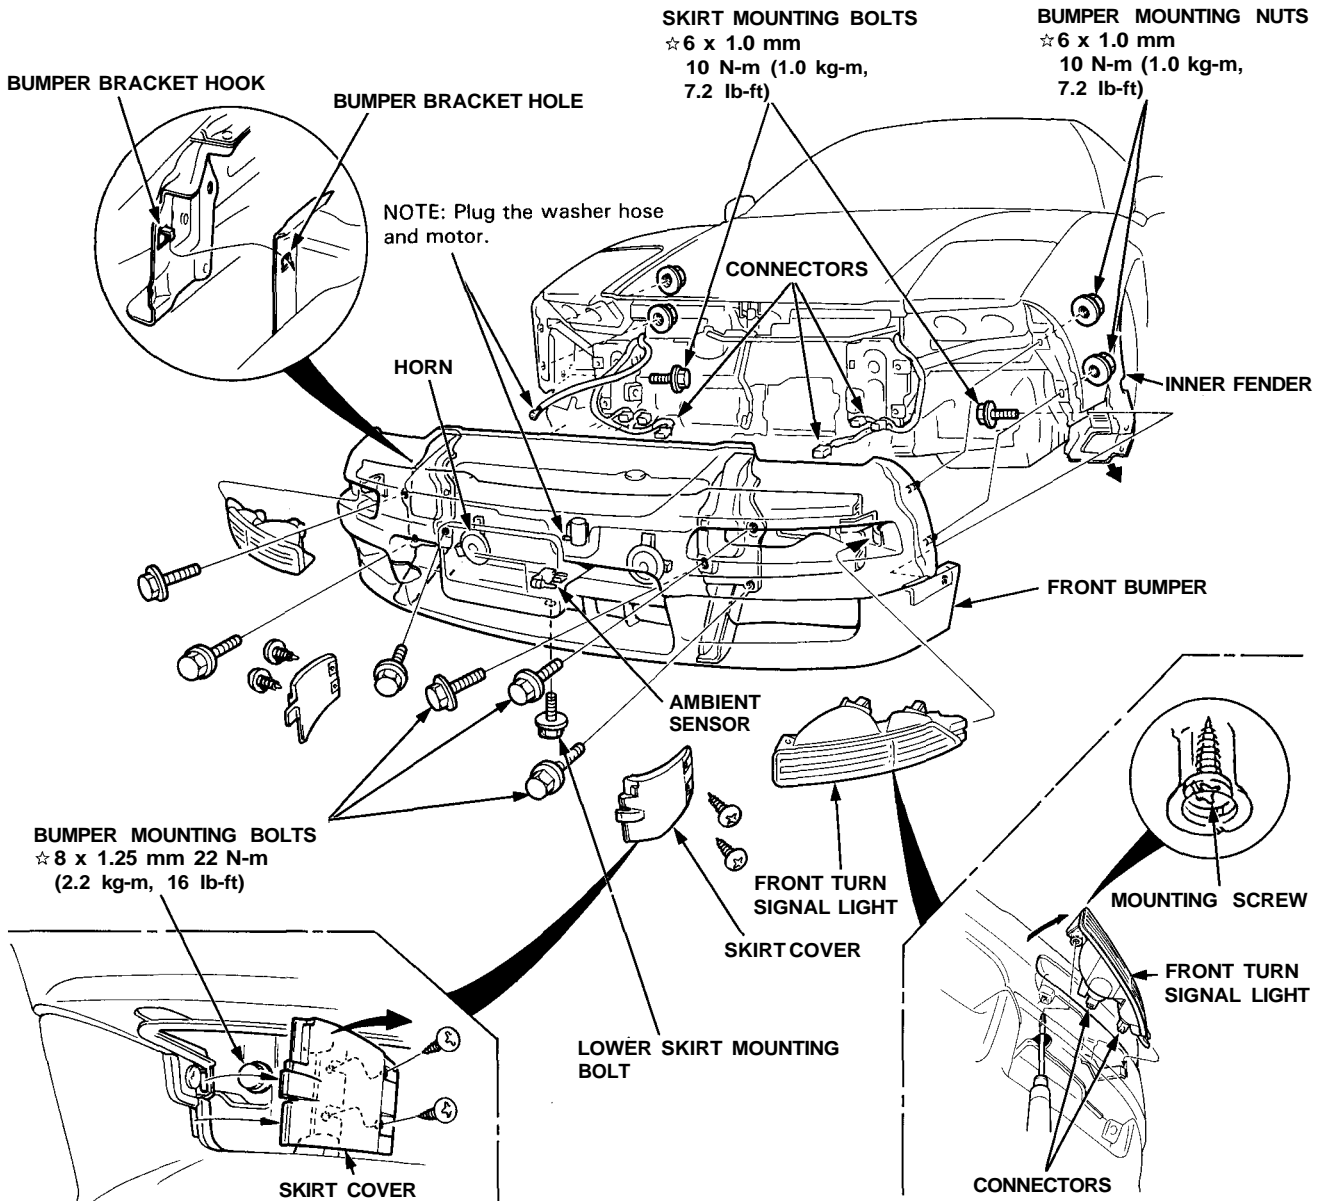

5. Installation is the reverse of the removal procedure.
NOTE: Insert the bumper bracket hooks into the bumper bracket holes.

☆: CORROSION RESISTANT BOLT/NUT