



Opener Cables

Replacement

1. Remove the openers and latches, then disconnect the opener cables.
2. Remove the fuel lid latch.
3. Remove the opener cables by removing the clips as shown,


NOTE:

- Before pulling out the opener cables, tie a string to the opener cable so you can pull it back in later.
- Take care not to bend the opener cables,

4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cables are routed and connected properly,
- If necessary, adjust the opener cables by changing the position of the cable housing.
- If necessary, replace any damaged clips.

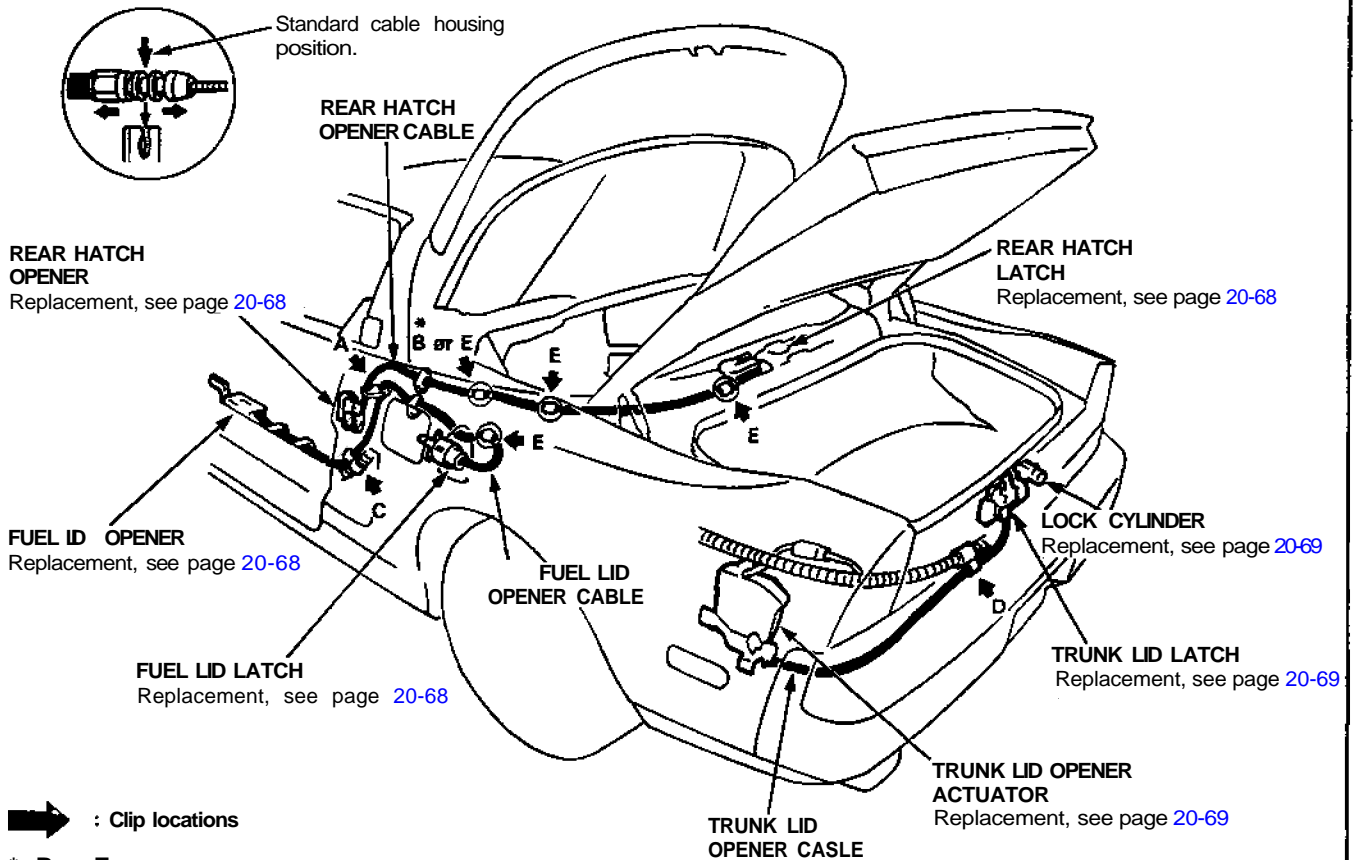

*: B or E
 B: coupe
 E: NSX-T (open top)

