

# Side Air Scoop/Side Sill Panel/Side Step Panel

## Replacement

**CAUTION:** When prying with a flat tip screwdriver, wrap it with protective tape or a shop towel to prevent damage.


**NOTE:**

- Take care not to scratch the body and related parts.
- Do not drop the special mounting nuts inside the body.


Disassemble in numbered sequence.

► : Clip location

○ : Special bolt locations

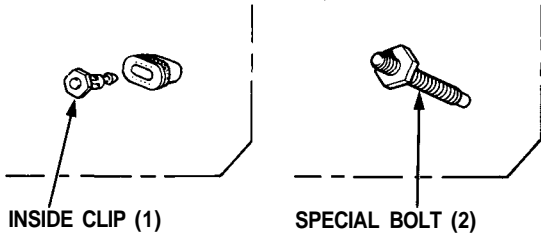

Side air scoop removal:

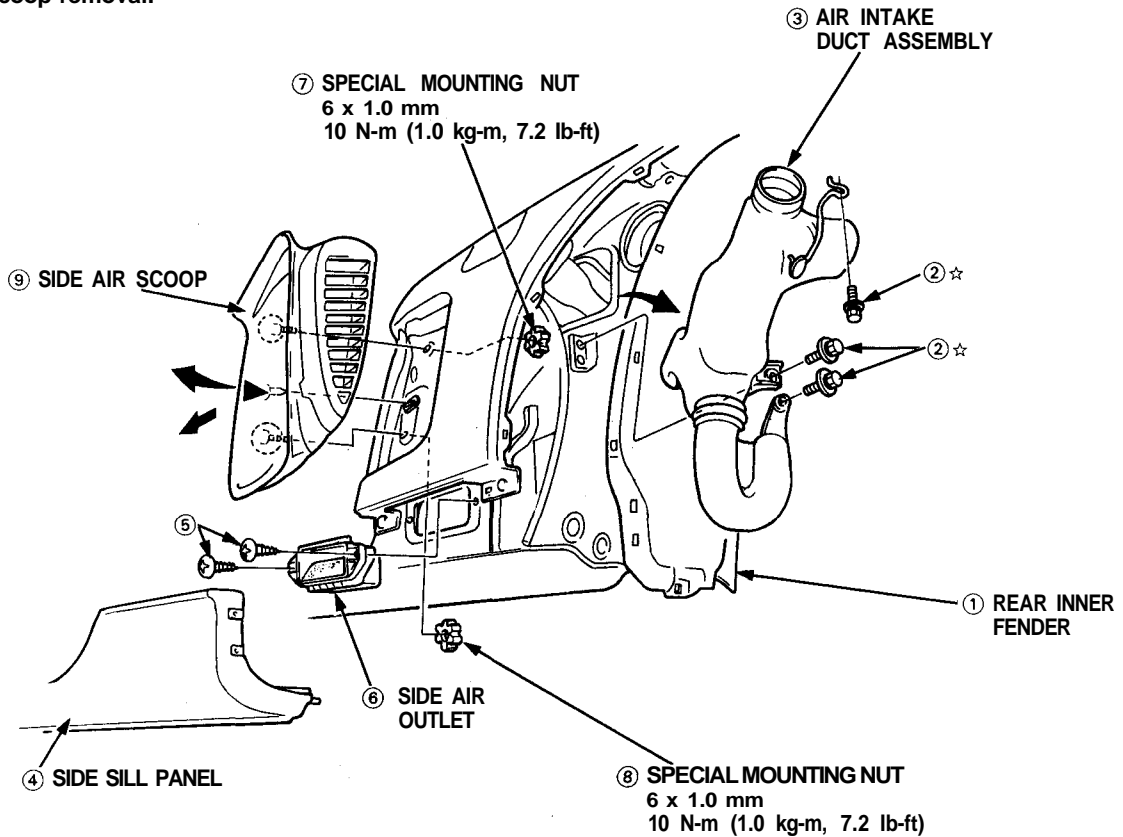

☆: CORROSION RESISTANT BOLT





**NOTE:**

- Take care not to twist the side sill panel.
- Take care not to scratch the body and related parts.


Disassemble in numbered sequence.

**►: Clip locations**

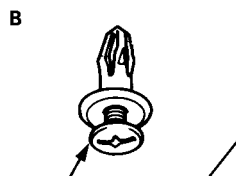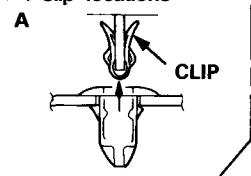


**NOTE:** Loosen the screw, then remove the clip using a clip remover.

**○: Clip locations**

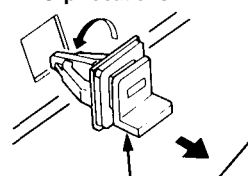


**SIDE CLIP (9)**  
Remove the clips by turning them 45°.

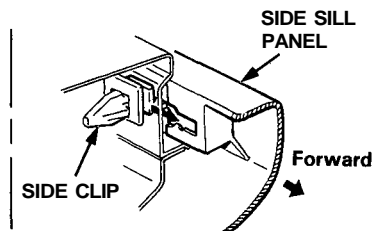

**NOTE:** When removing the side sill panel, the clips will stay in the body.

**Side sill panel and side step panel removal:**

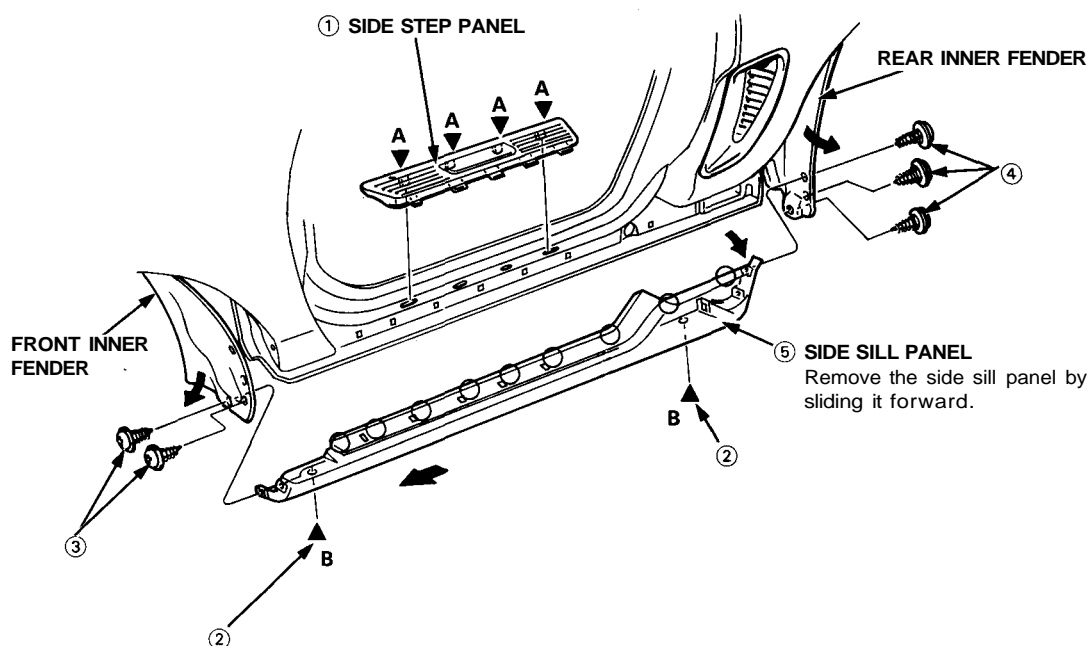

To install the side sill panel, remove the clips from the body, install them on the panel, then install the panel on the car.

**NOTE:** If necessary, replace any damaged clips.