

Water Leak Test

NOTE: When the following parts have been replaced or removed, and or the roof side lock unit, door glass and door have been adjusted, this water leak test should be done.

- Roof side seals
- Roof side lock units
- Front and rear pillar seals
- Door and door glass

1. Make sure that the roof is locked securely.
2. Raise the glass fully, and close the doors.
3. Spray water over the roof and on the sealing area as shown.

NOTE:

- Adjust the water pressure as shown.
- Do not squeeze the tip of the hose.

4. Check for water leaks.
5. If there are leaks, recheck the work performed, and recheck the door glass, seal, and retainer adjustments.

