



## Function Selection and Operation Check

This check will quickly and automatically select and operate all functions of the climate control system, in the combinations and sequence shown below. It may help clarify a problem, or identify one that didn't show up when you perform the self-diagnosis circuit check.

Turn the FAN switch to AUTO, then push in both the MODE and AUTO buttons and hold them in while you start the engine. The control unit will then automatically run the check in eight steps, one step every five seconds.

To stop at one of those steps, push the MODE button; to continue, push it again for each step after that.

Pushing the OFF button or turning the ignition OFF, will turn off the check.

Check the temperature, volume, and source of the air flow, and compare it to what the chart shows it should be.

		"TEMP" Display	88	1	2	3	4	5	6	7	8	88
Function Selected	FAN		OFF	Low			High				Low	OFF
	AirMix Door		Open	Half Closed	Half Closed	Fully Closed	Fully Closed	Half Open	Half Open	Fully Open	Fully Open	
	MODE (and VENT)											
	Fresh Recirc			*					*			
	A/C		OFF			ON			*		OFF	

\* Vent door fully open.