


Sunlight Sensor

Removal

With a small screwdriver, carefully pry the sunlight sensor out of the dashboard and disconnect its connector. Protect the dashboard; cover it with a shop towel before you pry against it.

SUNLIGHT
SENSOR

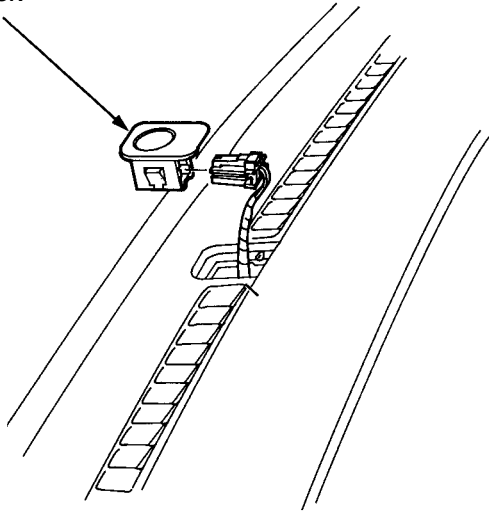

Test

Measure the voltage between the terminals with the sensor out of direct sunlight.

- With the connector connected (probe the back of it): 1.4 ± 0.2 V
- With the connector disconnected: 0.1 — 0.2 V

