


# Blower Unit Replacement


1. Remove the spare tire (refer to Owner's manual).
2. Remove the spare tire holder.  
★ CORROSION RESISTANT BOLT

★ 6 x 1.0 mm  
10 N·m (1.0 kg-m, 7 lb-ft)

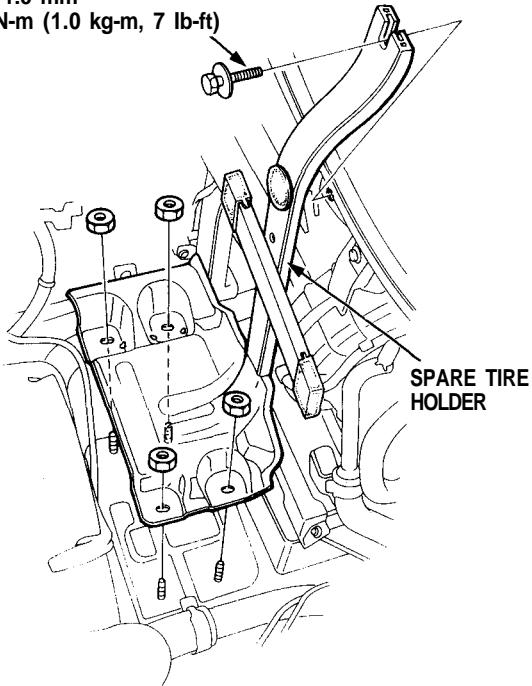


4. Remove the under-hood relay box A and the water drain duct. Disconnect the connectors from the blower motor, power transistor and recirculation control motor.
- ★ CORROSION RESISTANT BOLT

★ 6 x 1.0 mm  
10 N·m (1.0 kg-m, 7 lb-ft)

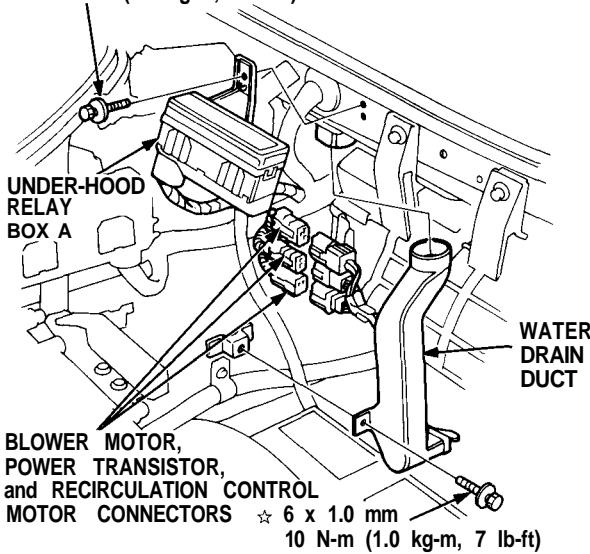

5. Remove the mounting bolts, then remove the blower unit.

★ CORROSION RESISTANT BOLT

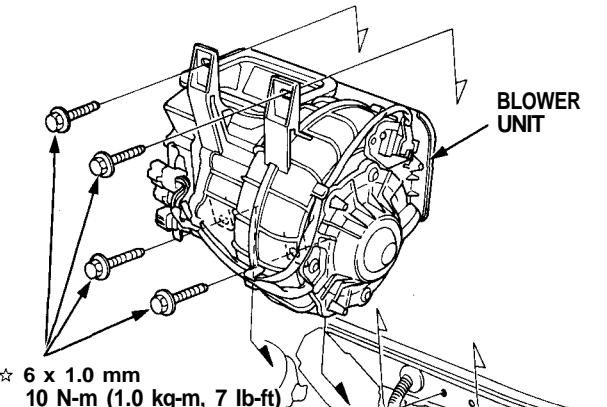

6. Install the blower unit in the reverse order of removal, then make sure it runs and doesn't leak any air.

BATTERY  
HOLD-DOWN BRACKET