






Fan Relay Tests

Check continuity at the relay terminals.

- There should be continuity between the C and D terminals.
- There should be continuity between the A and B terminals when power and ground are connected to the C and D terminals.
- There should be no continuity between the A and B terminals when power is disconnected.

- Radiator fan low relay
- Radiator fan high relay
- Condenser fan relay

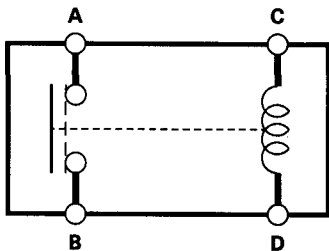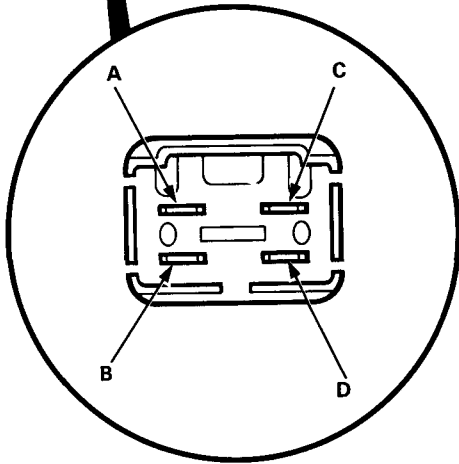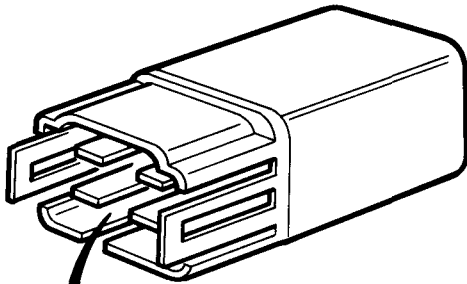

Engine compartment fan relay (A/T)

