




Vehicle Speed Sensor (VSS)

Replacement

1. Disconnect the 3-P connector from the vehicle speed sensor (VSS).

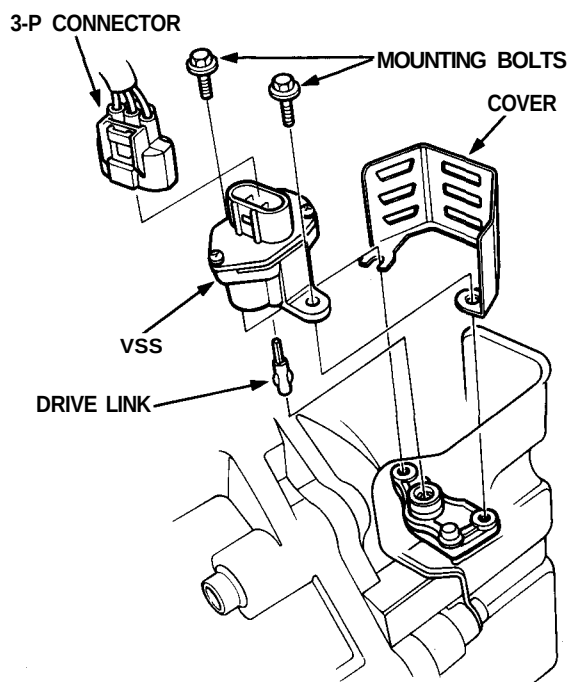

2. Remove the mounting bolts and the VSS, then take out the VSS assembly.

NOTE: The VSS drive link is a very small part, be careful not to lose it.

3. Install in the reverse order of removal.