



## Roof Holder Switch Test

1. Open the rear hatch and engine cover.
2. Disconnect the 1-P connector from the roof holder switch.
3. There should be continuity between the A and B terminals with the switch released (roof not stored).
4. There should be no continuity with the switch pushed (roof stored).

