

# A/T Gear Position Indicator

## Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS [section 24](#) before performing repairs or service.

NOTE: For **3M** indicator troubleshooting, refer to [section 14](#).

