


Combination Light/Turn Signal Switch Test

- 1. Remove the dashboard lower cover (see page 23-182).
- Disconnect the 18-P connector from the floor wire harness.
- 3. Check for continuity between the terminals, in each switch position, according to the table.

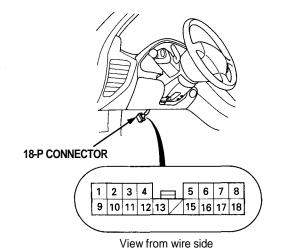

Headlight/Dimmer/Passing Switch

Headlight/Dimme	#I/Fassiriy	SWILL	11												
\	Terminal	2		3	4	5	7	8		12	13		15	16	18
Position					_		_				,				
All positio	n						 0	0-	<u></u>				-0	,	- 0
Headlight switch	OFF				0-			1			-0				
	•	0-	H -			0									
	•			0						-0				+0	
		0	H			0						:			
Dimmer switch (Headlight switch " ● ")	LOW			0-										0	
		 	4			0				10					
	HIGH			0										0	
		0-	—							0				i	
		0-	—— —		_	_	ļ	1				l .	-0		
Passing switch	ON	0-								0		H	0		
			─				0-								
		0-	—	-			<u> </u>	<u> </u>	 				-		

Turn Signal Switch

Terminal Position	6		10	11
RIGHT	0	N	-0	
NEUTRAL				
LEFT	0	>		9