


Ceiling Light Replacement

Coupe:

1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the two bolts and the housing.
4. Disconnect the 4-P connector from the housing.

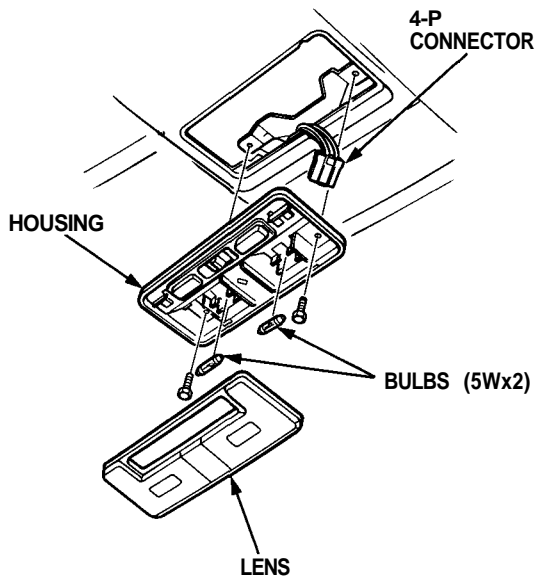

NSX-T (open top):

1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the two screws and the housing.
4. Disconnect the 3-P connector from the housing.

