



# Entry Light Timer System

## Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS [section \(24\)](#) before performing repairs or service.

**Description:** If the driver's door has been opened by the outer handle, the foot well light and a light at the Ignition switch go on and stay on for about eight seconds after the driver's door has been closed.

