



# Power Mirrors

## Door Mirror Actuator Replacement

1. Remove the mirror and actuator assembly from the housing (see [section 20](#)).
2. Place the mirror on a flat, padded surface. Pull up on the spring-loaded lug, and remove the roll pin.

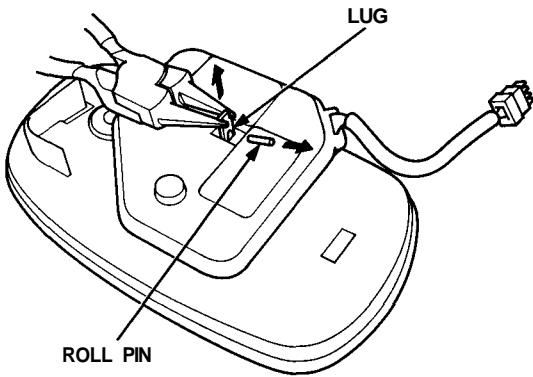


3. Pull the actuator away from the mirror. If the actuator shafts do not come off with the actuator, pry them out of their sockets.

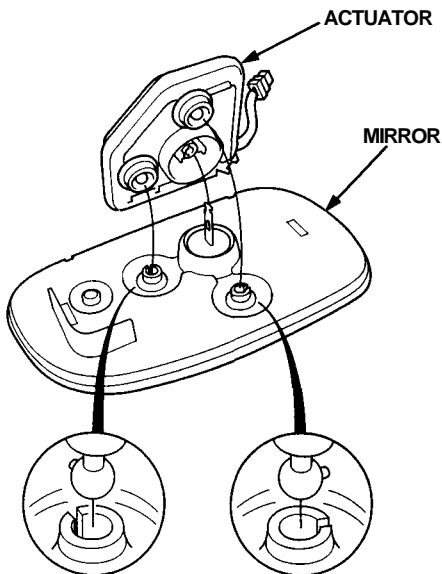

4. Discard the actuator and shafts.

5. Set the new actuator on the back of the mirror with the lug protruding through the middle. Pull up on the lug, and install the roll pin removed in step 3.
6. Press the actuator shafts into the sockets on the mirror.

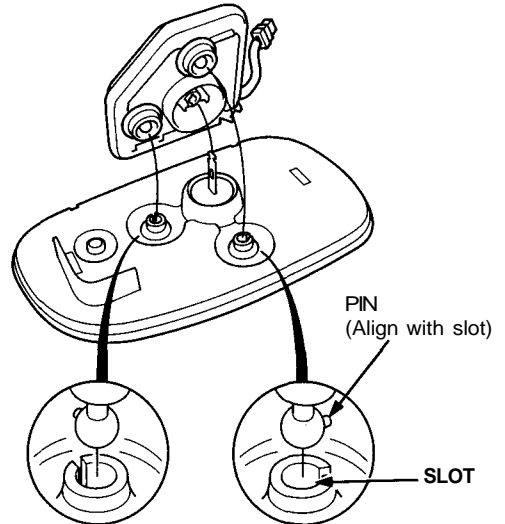

7. Install the mirror and actuator assembly in the housing (see [section 20](#)).
8. Test the mirror's operation.