





Master Switch Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 12-P connector.
3. Check for continuity between the terminals in each switch position according to the tables.

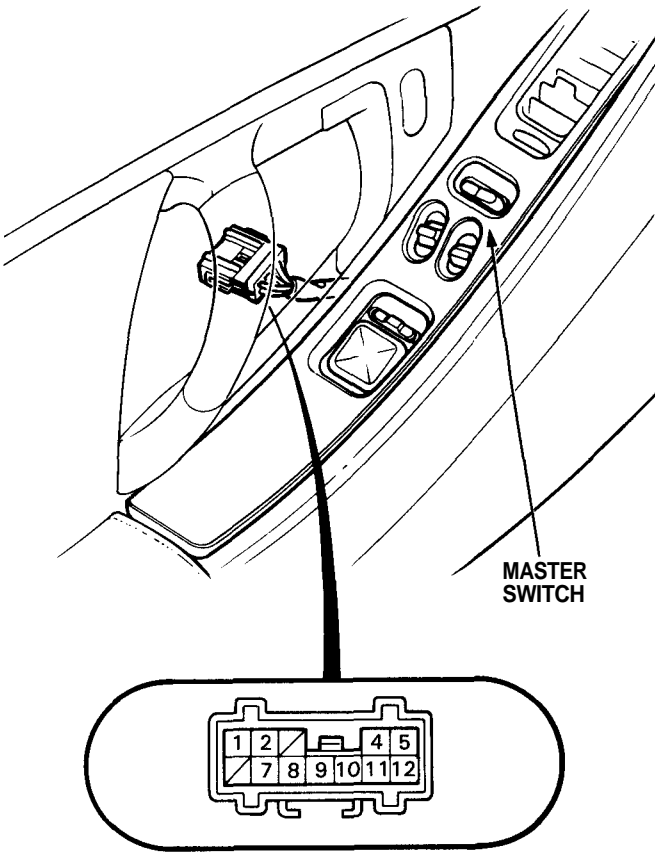

MASTER SWITCH

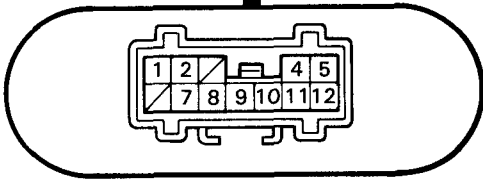

View from wire side

Driver's Switch

Terminal	2	5	1	12
Position				
UP	○	○		
OFF				
DOWN		○	○	
DOWN (AUTO)		○	○	○

Passenger's Switch

Terminal	4	11	9	10
Position	Main Switch			
UP	ON	○	○	○
	OFF	○	○	
OFF	ON		○	○
	OFF		○	○
DOWN	ON	○		○
	OFF	○		○

Switch Light

8		7
○	○	○