


PowerWindows

Driver's Motor Test

Motor Test:

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 4-P connector from the driver's motor.

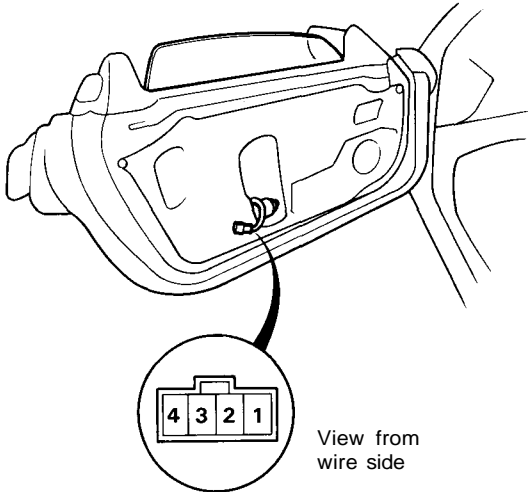


3. Test the motor by connecting battery power to the No. 4 terminal and ground to the No. 3 terminal. Test the motor in each direction, by switching the leads from the battery.

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.


Pulser Test:

Connect the test leads of an analog ohmmeter to the No. 1 and No. 2 terminals and check for needle movement while running the motor by connecting battery power to the No. 4 and ground to the No. 3 terminal. The analog ohmmeter needle should move back and forth alternately.

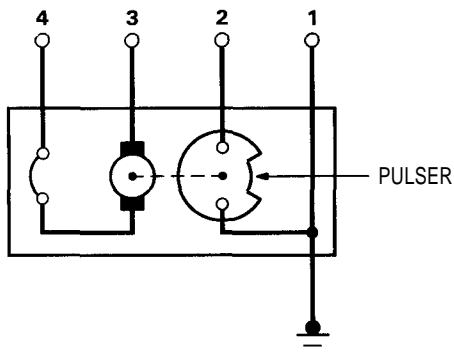

Passenger's Motor Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 2-P connector from the motor.

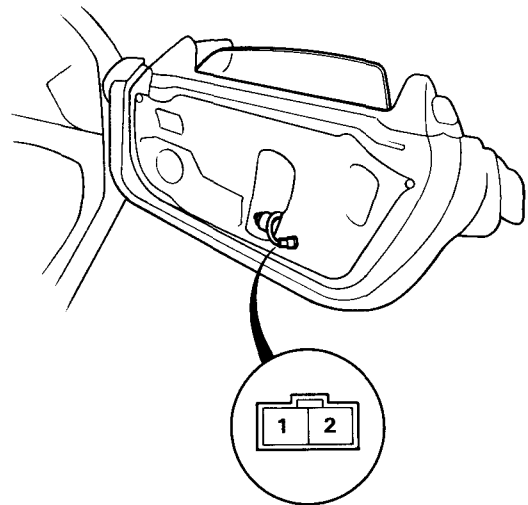

View from wire side

3. Test the motor by connecting battery power to the No. 1 terminal and ground to the No. 2 terminal. Test the motor in each direction, by switching the leads.

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.

