



Relay Test

1. Remove the power window relay in the under-hood fuse/relay box.
2. Check continuity at the relay terminals.
 - There should be continuity between the C and D terminals.
 - There should be continuity between the A and B terminals when power and ground are connected to the C and D terminals.
 - There should be no continuity between the A and B terminals when power is disconnected.

