


Power Seats

Seat Switch Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the two screws, then remove the power seat switch from the power seat.
2. Disconnect the 5-P connectors from each power seat switch.
3. Check for continuity between the terminals, in each switch position, according to the table.

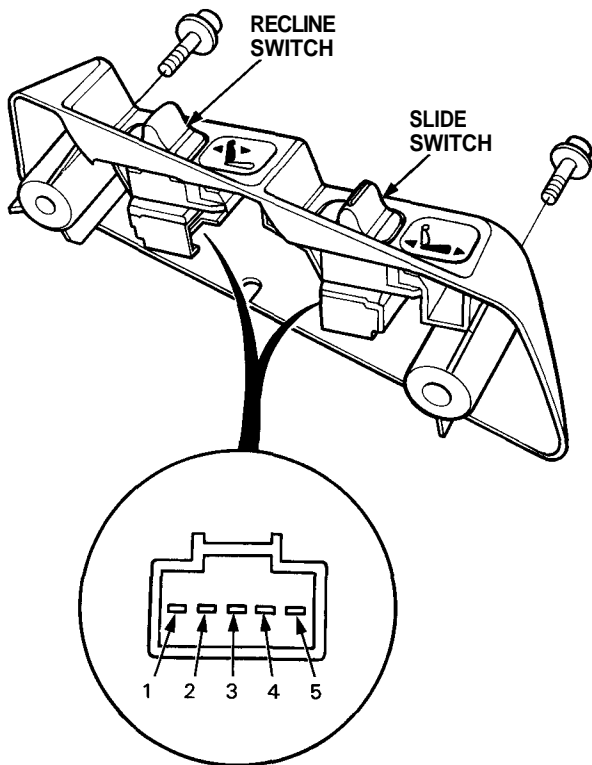

Position		Terminal				
		3	5	4	2	1
SLIDE	FORWARD		○—○		○—○	
	NEUTRAL	○				○
	BACKWARD	○				○
RECLINE	FORWARD	○			○—○	○
	NEUTRAL	○				○
	BACKWARD		○—○		○—○	